



Reinstalling the Avid Cinema Software

In rare instances, you may need to reinstall your Performa software; your Performa user's manual tells you when and how to do so using the *Performa Software CD*. Some computer models also come with an additional disc, called the *Guided Tour CD*, which you must use after the *Performa Software CD* to reinstall your Performa software. However, in neither of these cases will the Avid Cinema program be reinstalled. To reinstall this program, you must do so separately using the *Avid Cinema CD-ROM* disc.

To reinstall the Avid Cinema program, follow these instructions.

- 1** If you've just reinstalled your Performa software using the *Performa Software CD* (or both the *Performa Software CD* and the *Guided Tour CD*) and you haven't removed the CD-ROM disc from the CD-ROM drive yet, choose Restart from the Special menu while you press the Open/Close button on the CD-ROM drive. When the the tray opens, remove the disc.
- 2** Press the Open/Close button of your CD-ROM drive tray to open it and place the *Avid Cinema CD-ROM* disc in the tray with the disc label facing up.

Don't use the *Avid Cinema Workshop CD*. Use the CD called *Avid Cinema*.
- 3** Push in the CD-ROM tray to close it.
- 4** Hold down the C key on your keyboard while you restart your computer.

Continue to hold down the C key until you see the "Welcome to Macintosh" message.

In a few seconds, a Macintosh desktop with a Launcher appears.

5 Click the Restore Avid Cinema icon in the Launcher.

A screen with a Continue button appears.

6 Click Continue, or press the Return key on your keyboard.

Restoring begins and takes several minutes.

7 When you see a message that the software was restored successfully, click the Restart button while you press the Open/Close button on the CD-ROM tray.

While the computer restarts, continue to press the Open/Close button on the CD-ROM tray until it opens and you can remove the CD-ROM disc.

If the tray doesn't open, do this step again: Choose Restart from the Special menu and press the Open/Close button until the tray opens.

When your computer restarts and ejects the Avid Cinema CD, the regular Macintosh desktop with the Launcher appears. You have successfully restored the Avid Cinema software.