



## If You Want to Use Avid Cinema Software

The Avid Cinema software is not preinstalled on your hard disk, so if you want to use the software for the first time, you need to install it yourself. The software for the Avid Cinema program itself is on the CD-ROM titled *Avid Cinema*.

Take note too that if you ever need to reinstall your Performa software, you also need to reinstall (“restore”) the Avid Cinema software afterward. (If that is the case, follow the instructions in your Macintosh Performa user’s manual for reinstalling your computer’s software before you follow the instructions in this update.)

To install or reinstall the Avid Cinema software, follow these instructions:

- 1 Press the Open/Close button of your CD-ROM drive tray to open it and place the *Avid Cinema* CD-ROM disc in the tray with the disc label facing up.**

Use the CD called *Avid Cinema*; don’t use the *Avid Cinema Workshop* CD.

- 2 Push in the CD-ROM tray to close it.**
- 3 Hold down the C key on your keyboard while you restart your computer.**

Continue to hold down the C key until you see the message “Welcome to Macintosh.”

In a few seconds, the Macintosh desktop with a Launcher appears on your screen.

- 4 Click the Restore Avid Cinema icon in the Launcher.**

A screen with a Continue button appears.

**5 Click Continue, or press the Return key on your keyboard.**

Installation begins and takes several minutes. When installation is complete, a message tells you that the software was restored successfully.

**6 Click Restart while you press the Open/Close button on the CD-ROM tray. While the computer restarts, continue to press the Open/Close button on the CD-ROM tray until it opens.**

If the tray doesn't open, do this step again: Choose Restart from the Special menu and press the Open/Close button until the tray opens.

After your computer restarts and ejects the *Avid Cinema* CD, the regular Macintosh desktop with the standard Launcher appears. You can now begin using the *Avid Cinema* software.

**7 Remove the CD-ROM disc and close the CD-ROM tray.**