

## Connecting Antennas, Cable, and Other Video Equipment

### Before you start

The TV/FM tuner card should already be installed in your computer.

- If you purchased the computer with the TV/FM tuner card already installed, you are ready to read the information in this manual.
- If you purchased the *Apple TV/FM Radio System* kit separately from your computer, before you read this manual be sure to install the card following the instructions in the *Apple TV/FM Radio System Installation Manual* (the other manual in your kit).

After the card is installed, you are ready to connect an FM antenna and a TV antenna (or cable service connection) to your card.


The steps for connecting the antennae to your card vary slightly depending on the type of computer you have: compact (with a built-in monitor), modular, or tower.

**If you have a compact computer**


After installing the TV/FM tuner card by attaching the card to the computer, you then attach an FM antenna and a TV antenna (or cable service connection) to the card.

To attach FM and TV connections to the card, follow these steps.


- 1 Turn off the computer if it isn't already off. Choose Shut Down from the Special menu. Then press the power switch (marked with the ) at the back of your computer.
- 2 Attach the provided FM antenna to the FM port—the port on the left, marked by the  icon.

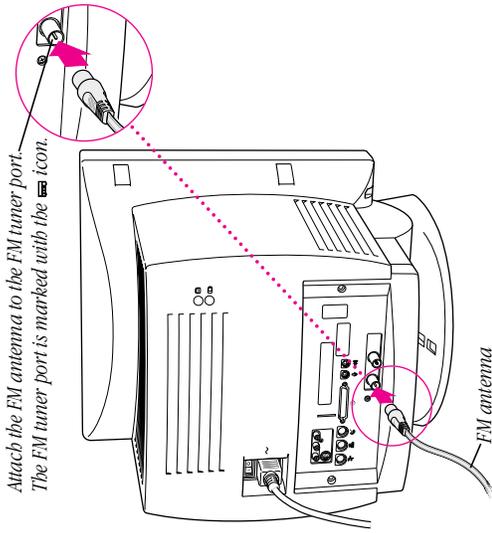

- 3 Connect the TV port on the right, marked by the  icon, to a cable service or to a TV antenna.

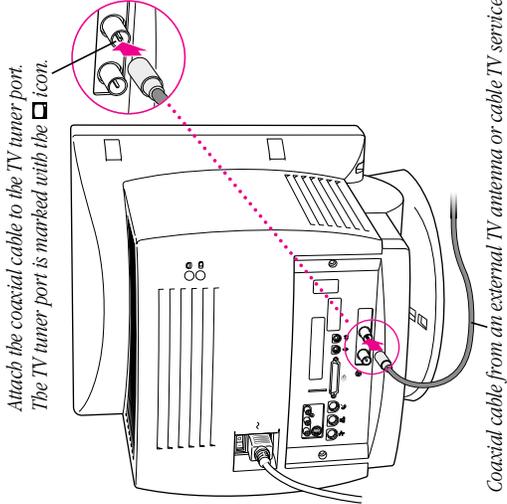


**Important** Do not attach or detach the coaxial cable while the computer is turned on.

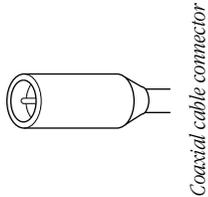

- 4** Unfold the FM antenna and position it high in a “T” for the best reception.

Attach the antenna to a wall in the position that gives the clearest reception. Use tape, thumbtacks (anywhere through the middle of the plastic strips), or pushpins (through the white plastic ends).

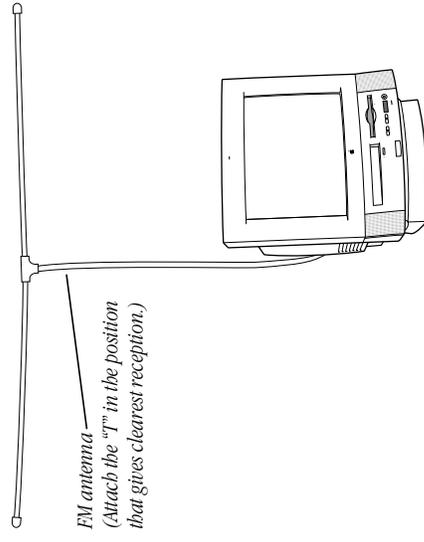


- 5** Skip the next two sections about other types of computers, and go on to “Connecting Other Video Equipment.”

**If you have a modular computer**


After installing the TV/FM tuner card by attaching the card to the computer, you then attach an FM antenna and a TV antenna (or cable service connection) to the card.

To attach FM and TV connections to the card, follow these steps.

- 1** Turn off the computer if it isn't already off. Choose Shut Down from the Special menu.
- 2** Attach the provided FM antenna to the FM port—the port on the left, marked by the  icon.

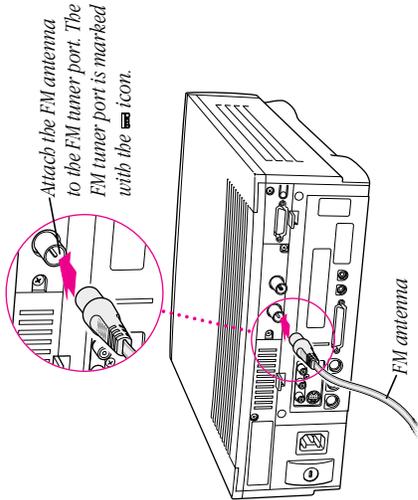

- 3** Connect the TV port on the right, marked by the  icon, to a cable service or to an antenna.

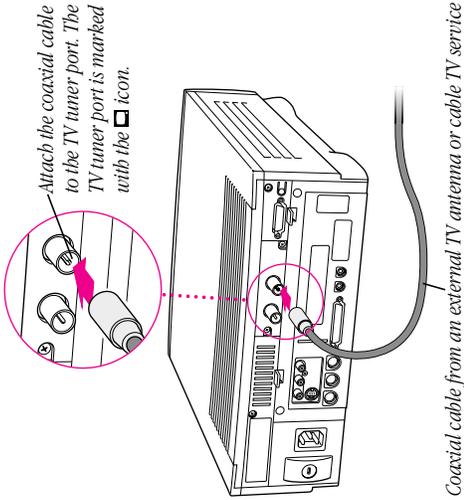


**Important** Do not attach or detach the coaxial cable while the computer is turned on.



Coaxial cable connector

**4** Unfold the FM antenna and position it high for the best reception.

Attach the antenna to a wall in the position that gives the clearest reception. Use tape, thumbtacks (anywhere through the middle of the plastic strips), or pushpins (through the white plastic ends).

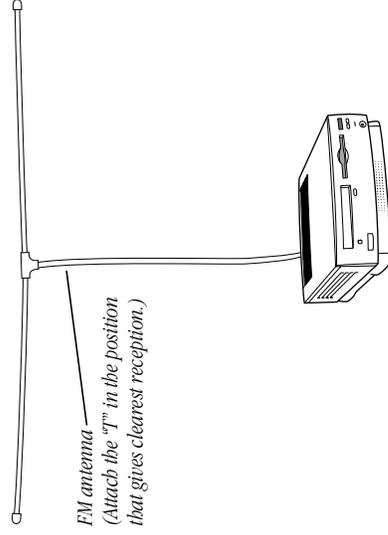


**5** Skip the next section, "If You Have a Tower Computer," and go on to "Connecting Other Video Equipment."

**If you have a tower computer**


After installing the TV/FM tuner card by attaching the card to the computer, you then attach an FM antenna and a TV antenna (or cable service connection) to the card.

To attach FM and TV connections to the card, follow these steps.


- 1** Turn off the computer if it isn't already off. Choose Shut Down from the Special menu.
- 2** Attach the provided FM antenna to the FM port—the port on the left, marked by the  icon.

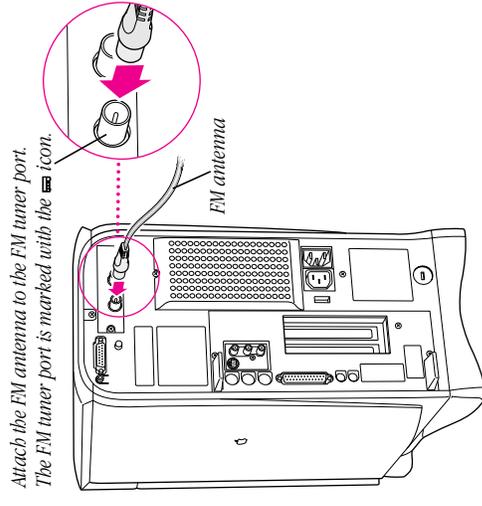

- 3** Connect the TV port on the right, marked by the  icon, to a cable service or to an antenna.

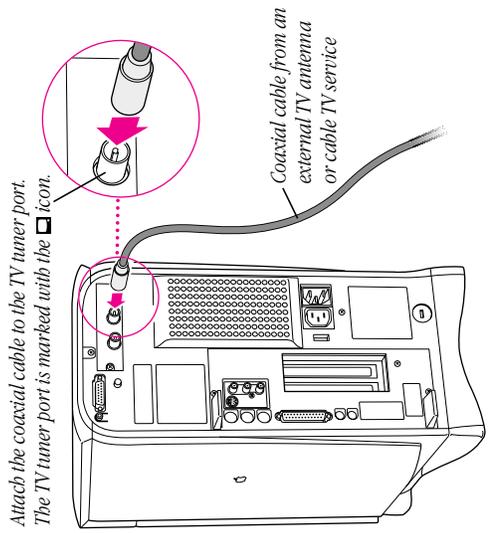

 
**Important** Do not attach or detach the coaxial cable while the computer is turned on.



*Coaxial cable connector*

- 4** Unfold the FM antenna and position it high for the best reception.

Attach the antenna to a wall in the position that gives the clearest reception. Use tape, thumbtacks (anywhere through the middle of the plastic strips), or pushpins (through the white plastic ends).

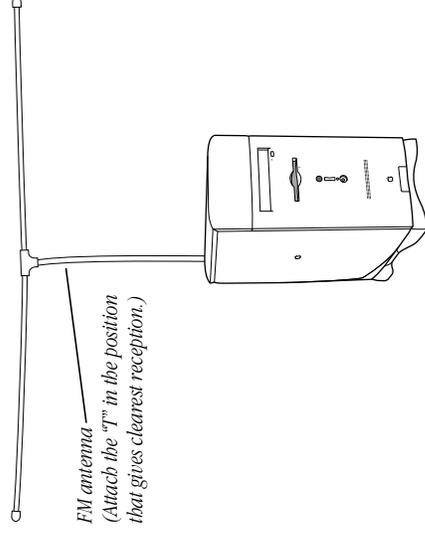

## Connecting other video equipment

If you want to see video on your computer from a VCR, laserdisc player, video camera, or other video equipment, you need to connect the equipment to the ports on the video input card in your computer.

You can connect one piece of equipment to the S-video port or one piece to the composite video port on the video input card.

**Note** You can also connect two pieces of video equipment to the video input card simultaneously—one to the S-video input port on the card and another to the composite video input port on the card. For example, you can view a recording from a video camera connected to the S-video port, then switch—using the Apple Video Player application, without having to disconnect cables—to viewing video from a VCR connected to the composite port on the card. However, you will hear sound only from that piece of equipment that is connected to the audio input ports on the card.

## Preparing to connect video equipment

- Before you start, make sure that
- both the Macintosh and the video equipment are turned off
  - you place the video equipment near enough to your Macintosh for easy connection
  - you determine which type of video connector you need for your video equipment (see the next section)

## Determining which video connector you need

Check the video out port or ports on your video equipment. A video out port should look like one of the ports pictured below. (You may have both ports.)



S-video port



Composite video port (RCA-type)

To connect to a composite video out port, use a composite (RCA plug) connector. See “Connecting Video Equipment If You Use a Composite (RCA Plug) Video Connector.”



Composite connector (RCA plug)


To connect to an S-video video out port, use an S-video connector. See “Connecting Video Equipment if You Use an S-video Connector.”




S-video connector

**Connecting video equipment if you use a composite (RCA plug) video connector**

To connect your video equipment you need one video cable and two audio cables, all with RCA plugs at both ends. The cables can be separate or joined. You can purchase cables at electronics supply stores.

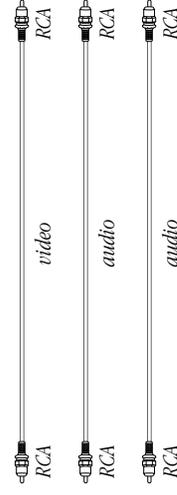

or

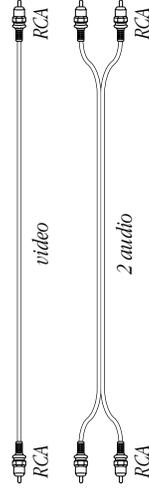

or



**Note** If you have only one audio out port on your video equipment, you can use a Y-adaptor audio cable. This cable has a single plug on one end to plug into your equipment and a double plug (where it forms a Y) on the other end to plug into the two audio ports on the video input card.

- 1 Make sure that both the Macintosh and the video equipment are turned off.
- 2 Attach one end of the video cable to the video out port on the video equipment.
- 3 Plug the other end of the video cable into the yellow composite video input port on the video input card.
- 4 Insert the RCA plugs on one end of the audio cables into the left and right audio out ports on the video equipment.


*If you're using a Y-adaptor audio cable:* Plug the single end of the cable into the audio out port on your video equipment.

- 5 Insert the RCA plugs on the other end of the audio cables into the left (white) and right (red) sound input ports on the video input card.

Be sure to plug the cable from the left audio out port on the video equipment to the left sound input port on the computer. Connect the right ports in the same way.

*If you're using a Y-adaptor audio cable:* Plug the double end of the cable (where it forms a Y) into the right and left sound input ports on the video input card.


The illustration below shows a modular computer, but the video input card ports are similar on a computer with a built-in monitor or a tower computer.

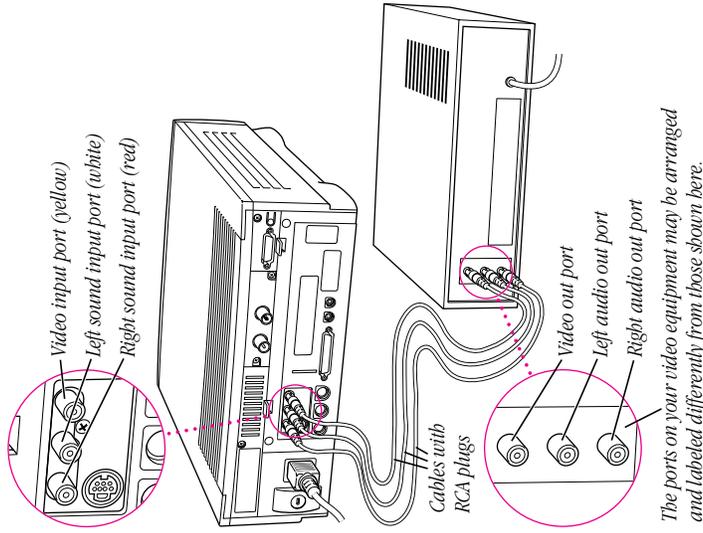

Your video equipment is now connected to the video input card.

### Connecting video equipment if you use an S-video connector

To connect your video equipment you need one video cable with S-video connectors on both ends and two audio cables with RCA plugs at both ends. The RCA cables can be separate or joined. You can purchase cables at electronics supply stores.

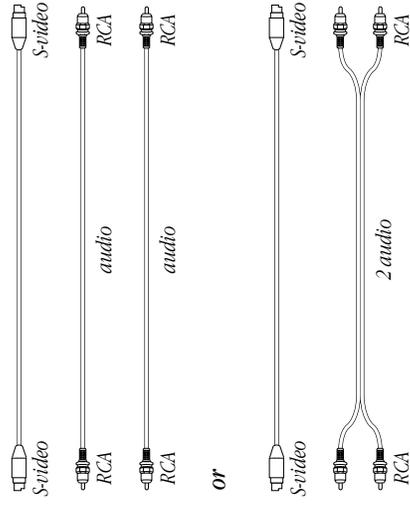

**Note** If you have only one audio out port on your video equipment, you can use a Y-adapter audio cable. This cable has a single plug on one end to plug into your equipment and a double plug (where it forms a Y) on the other end to plug into the two audio ports on the video input card.

- 1 Make sure that both the Macintosh and the video equipment are turned off.
- 2 Attach one end of the video cable to the video out port on the video equipment.

- 3 Plug the other end of the video cable into the S-video input port on the video input card.

**About the S-video port:** The S-video port accepts 4-pin and 7-pin connectors.

If the connector doesn't slide easily into the port, realign it and try again. Avoid using force, which could damage the card or the connector.

- 4 Insert the RCA plugs on one end of the audio cables into the left and right audio out ports on the video equipment.


**If you're using a Y-adaptor audio cable:** Plug the single end of the cable into the audio out port on your video equipment.

- 5 Insert the RCA plugs on the other end of the audio cables into the left (white) and right (red) sound input ports on the video input card.

Be sure to plug the cable from the left audio out port on the video equipment to the left sound input port on the computer. Connect the right ports in the same way.

**If you're using a Y-adaptor cable:** Plug the double end of it (where it forms a Y) into the right and left sound input ports on the video input card.

The illustration below shows a modular computer, but the video input card ports are similar on a computer with a built-in monitor or a tower computer.

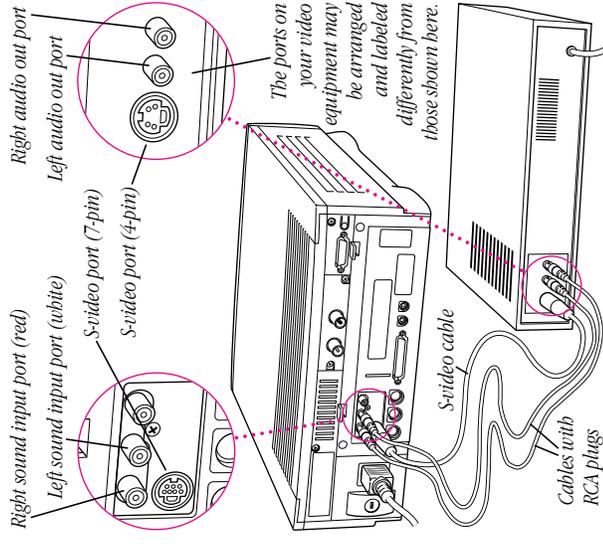

Your video equipment is now connected to the video input card.

### **Where to go from here**

The TV/FM tuner card is preset to display TV shows from broadcast TV and to play FM radio broadcasts.

#### **If you want to listen to the radio**

- To begin listening to the radio immediately, turn to Chapter 2, “Listening to the FM Radio.”
- To preset your favorite stations or to set the radio to receive only the strongest station signals, see Chapter 3, “Customizing the FM Radio Settings.”
- To learn how to save radio recordings on your computer, see Chapter 4, “Recording from the Radio.”

#### **If you want to watch TV or video**

- To begin watching TV or video immediately, turn to Chapter 5, “Watching TV or Video.”
- To customize TV tuner features in the way that best fits your viewing habits, see Chapter 6, “Customizing the TV Tuner Settings.”
- To learn how to capture individual images or whole movie sequences, see Chapter 7, “Capturing TV or Video Images.”

## Listening to the FM Radio

This chapter contains most of the information you need to use the Apple FM Radio application program to listen to FM radio on your computer.

You may find listening to the radio more convenient if you first set up some of the options discussed in Chapter 3, “Customizing the FM Radio Settings.”

*See also:* Chapter 9, “Using the Remote Control.”

## Turning on the FM radio

To turn on the Apple FM Radio application, open it by double-clicking its icon. (The application is in the Apple FM Radio folder, in the Apple Extras folder on your hard disk.)



### Apple FM Radio

**Note** If you can't find the Apple FM Radio application on your computer's hard disk, see the section on reinstalling the software in Chapter 10, "Troubleshooting."

When the Apple FM Radio application opens, a window appears and the radio comes on. (You may hear only static until you tune in a clear station.)

If you do not hear the radio right away, see the section "Problems Listening to the Radio," in Chapter 10.

**Note** If you get a message telling you to select TV as the video source in Apple Video Player, do that. If you need help, see "Choosing a Video Source" in Chapter 5.



## Turning off the FM radio


You turn off the Apple FM radio by quitting the application.

## Getting help

If while using the Apple FM Radio application you become stuck or forget how to do a task, on-screen help may be available. Make sure that the FM Radio window is active, then open the Guide menu (marked with the  icon) and choose Apple FM Radio Guide.

**Note** Apple FM Radio Guide is not available if you have a computer with system software earlier than 7.5.

To see explanations of all the items on the screen when you use Apple FM Radio, make sure that the FM Radio window is active, then choose Show Balloons from the Guide () menu.

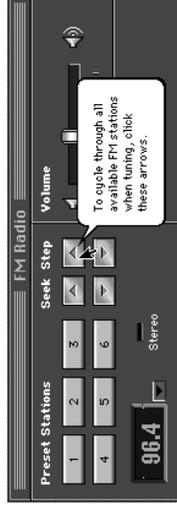

## Tuning in to stations

You can tune in to stations with the Apple FM Radio application much as you would with any radio—by pressing one of the tuning arrows or one of the six Preset Station buttons on the left (after you have assigned stations to them). The frequency number of the station you are playing is displayed.



To learn how to assign preset stations, see “Presetting Stations” in Chapter 3.

## Seeking stations

To tune in to only the clearest stations, click the Up or Down arrows under Seek. The FM radio stops at each of the clearest stations it receives.

**Note** The FM tuner is preset to search all stations for the clearest signals. However, you can set the tuner so that it searches for clear stations within a certain signal range or strength. For example, you can preset the tuner to scan only local signals or to scan all but the weakest signals. See “Setting Signal Range and Strength” in Chapter 3.

To automatically assign the clearest stations to the Preset Station buttons, see “Presetting Stations Automatically” in “Presetting Stations,” in Chapter 3.

## Stepping through all stations

To tune in to all available stations (whether or not they come in clearly), click the Up or Down arrows under Step. To cycle through the stations more rapidly, place the pointer on one of the arrows and hold down the mouse button.

## Adjusting the sound

You can adjust the FM radio’s volume and set the radio to receive stereophonic (stereo) or monophonic (mono) sound. The sound adjustments you make take effect immediately, so you can monitor your changes.

## Changing the sound’s volume

There are four ways to change the volume.


- Use the volume buttons on the front of the computer.
- Drag the slider next to the speaker icon on the FM Radio window. (You can also click anywhere in the slider’s track to move the slider to that position.)
- Press the Up Arrow key or Down Arrow key on the keyboard.
- Use the volume controls on the remote control. See Chapter 9, “Using the Remote Control.”

### Selecting stereo or mono sound

Apple FM Radio is preset to play sound in stereophonic (stereo) sound if the station broadcasts in stereo. Some stations come in more clearly if you select monophonic (mono) sound. To select stereo or mono sound, follow these steps.

- 1 Open the Options menu and drag to the Sound choice. A pop-up menu appears beside the Sound choice.
- 2 Choose Stereo to receive stereo sound or Mono to receive mono sound.

The chosen sound mode has a checkmark beside it.

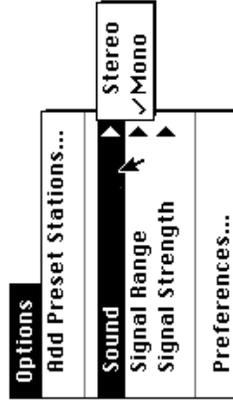

## Customizing the FM Radio Settings

This chapter explains how to use the Apple FM Radio application program to give names to stations, to preset stations you want to listen to most frequently, and to set the signal range and strength of the stations you want to receive.

You'll need to turn on the radio before following the instructions in this chapter. To turn on the radio, open the Apple FM Radio application program by double-clicking its icon. (The application is in the Apple FM Radio folder, in the Apple Extras folder on your hard disk.)



### Apple FM Radio

*Customizing is optional:* The information and instructions provided in this chapter are meant to make using your Apple FM Radio application more convenient. You don't have to customize the Apple FM Radio application to listen to the radio on your computer. For the basic information you need about listening to the radio, read Chapter 2.


## Presetting stations

This section describes how to preset stations so you can tune them in quickly.

### Tuning in to preset stations

After you assign preset stations, there are three ways you can tune them in:

- Press a Preset Station button in the FM Radio window.
  - Choose a preset station from the pop-up menu next to the frequency of the current station in the FM Radio window.
- The pop-up menu lists preset stations in numerical order for easier reference.

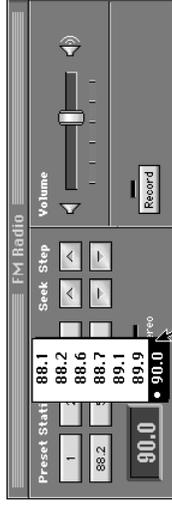

- Press one of the buttons in the Preset Stations window (chosen through the Options menu).


## Assigning stations to the Preset Station buttons

To specify your favorite station as a preset station, follow these steps:

- 1 Tune in to the station you want to preset. (See “Tuning in to Stations” in Chapter 2.)  
The station is displayed in the lower-left corner of the FM Radio window.
- 2 Use one of the following methods to assign the station to a button:
  - Place the pointer on a Preset Station button, then hold down the mouse button until you hear a beeping sound. The current station’s frequency appears on the button.
  - Place the pointer on the station’s frequency, drag it from the box onto one of the six Preset Station buttons, then release the mouse button. (Note: This method works only if you have system software version 7.5 or later.)



- Open the Options menu and choose Add Preset Stations. When the Preset Stations window appears, move it away from the FM Radio window so that you can see both of them clearly. Place the pointer on the station's frequency and drag it from the box onto one of the rows in the Preset Stations window. When the row highlights, release the mouse button.

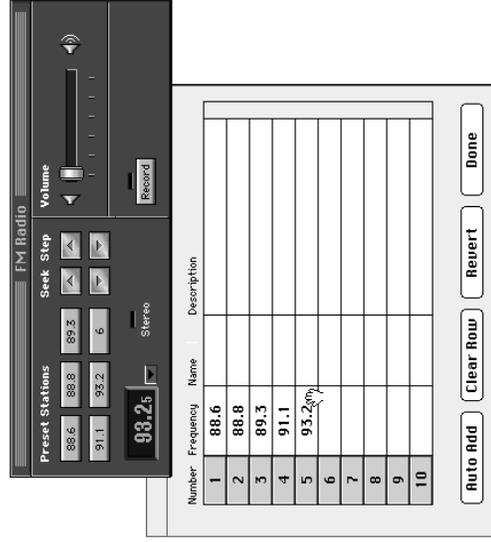

This method lets you preset more than six stations.

- Note** The first six rows in the Preset Stations window represent the six buttons in the FM Radio window.


- In the Preset Stations window, type in the frequency of the station you want assigned to that row.

You can also type in the station's name and your own description, although they're not required. To display this information on the Preset Station buttons, see "Labeling Preset Station Buttons" later in this section.

**Note** If you just type the station's name and not the frequency, the station won't be assigned as a preset station. You must type in the frequency because the frequency is what the FM tuner uses to find the station.

- 3 Click on the pop-up menu (the arrow next to the current station's frequency in the FM Radio window) to see the list of all stations you have preset. You can use this menu to choose a preset station to listen to.

If you want to make changes to the preset buttons, see "Changing Preset Stations" later in this section.

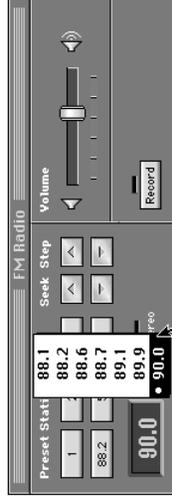

## Presetting stations automatically


When you preset stations automatically, the Apple FM Radio application automatically assigns the clearest stations to the first available rows in the Preset Stations window, after stations that have already been assigned. (The added stations also appear in the pop-up menu list in the FM Radio window.)

**Note** The Apple FM Radio application is set to search all stations for the clearest signals when automatically adding stations. You may want to search for stations within a certain signal range or strength. If you want to do this, see the section “Setting Signal Range and Strength” later in this chapter before you continue with these instructions.

To preset the clearest stations by adding them automatically, follow these steps.

- 1 Open the Options menu and choose Add Preset Stations.

The Preset Stations window appears.

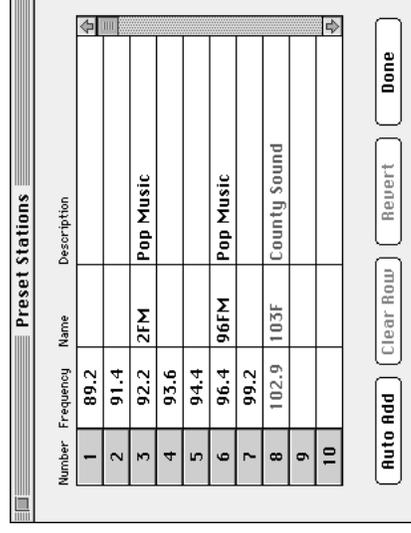

If you've preset stations already, they appear in the rows.

- 2 Click Auto Add.

The FM tuner adds the clearest stations to the rows in the Preset Stations window and to the pop-up menu in the FM Radio window. If you've preset some stations already, Auto Add **adds** to the list in the Preset Stations window; it does not override stations you have already preset. The stations added appear in numerical order after the stations that were already preset.

If you want to make changes to any of your preset stations, see “Changing Preset Stations” later in this section.


## Labeling Preset Station buttons

The Apple FM Radio application automatically displays stations' frequencies on the six main Preset Station buttons when you assign stations to them. But you can also display stations' names or descriptions on the buttons (or display simply the numbers 1 through 6 on them).

To display names, descriptions, or numbers on the Preset Station buttons, follow these steps:

- 1 Make sure that you have typed in names or descriptions for the stations in the Preset Stations window.

- 2 Open the Options menu and choose Preferences.

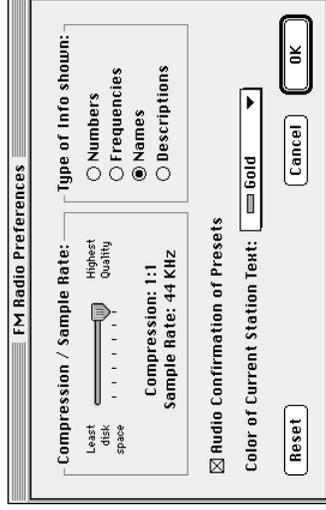

- 3 In “Type of Info Shown,” click in the circle next to one of the following:
- **Numbers**—if you want the preset buttons to be numbered in order, 1 through 6.
  - **Frequencies**—if you want station frequencies (for example, 102.1) to appear on the preset buttons.
  - **Names**—if you want the stations’ names to appear on the preset buttons.
  - **Descriptions**—if you want your own description of the station to appear on the preset buttons. (Only the first four to six characters of the description appear on the button.)

## Changing preset stations

There are several ways to change the stations you’ve preset.

- To change a station in the Preset Stations list, click in the frequency column of the row you want to change, and type a new frequency label.  
**Remember:** You must type in the frequency because the frequency is what the FM tuner uses to find the station. You can also change the call letters and description.
- To add the current station to the list, drag its frequency onto any button in the FM Radio window or to a row in the Preset Stations window.
- To move a preset station to a different button or place in the list, drag an entire row on top of another row in the Preset Stations window.
- To clear a row (delete its contents), click anywhere in the row and then click Clear Row.
- To undo all changes you just made to the Preset Stations window (since you last opened it), click Revert.

## Setting signal range and strength


You can set your FM radio so that it searches within a certain signal range or strength for the clearest signals whenever you use the Seek or Auto Add features.

### Choosing signal range

You can select the area—wide or local—from which Apple FM Radio receives stations. The Apple FM Radio is preset to receive whatever stations it can pick up, but you may sometimes want to choose a local range to reduce interference from strong neighboring stations (stations that are not local).

To choose the range of the signals in which the FM radio searches, follow these steps:

- 1 Open the Options menu and choose Signal Range.

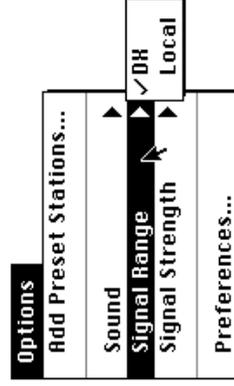

- 2 Choose DX to receive any station the radio can pick up. Choose Local to receive only local stations.


A checkmark appears beside the range that is selected.

### Choosing signal strength

By choosing a signal strength, you can set the Apple FM Radio to seek or automatically add stations that send signals of a certain strength. For example, if you set the signal strength to Strongest Only, the Apple FM Radio will seek or automatically add fewer stations than if you had set the signal strength to All Stations.

To choose the signal strength that the Apple FM Radio looks for when it seeks or adds stations, follow these steps:

- 1 Open the Options menu and choose Signal Strength.

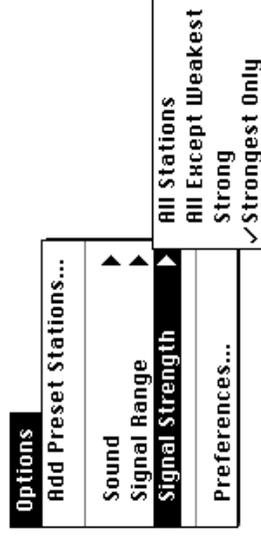

- 2 Select the signal strength you want.

The signal strength you choose affects how many stations come up when you use the Seek or Auto Add features.


### Setting other preferences

Besides selecting the type of station information you want to have appear on the Preset Station buttons, you can also choose the color in which the currently playing station's frequency is displayed, and whether or not you hear an alert sound as a confirmation when you preset a new station.

To learn how to change the compression/sample rate of any recordings you make, see the section “Compressing Recordings” in Chapter 4, “Recording from the Radio.”

- To change the color of text displaying the frequency of the current station, open the Options menu and choose Preferences. Click on the pop-up menu next to Color of Current Station Text and select the color you want.

**Note** Whatever station is currently playing is always displayed in red in the Preset Stations window. The color you choose only changes the frequency of the current station displayed at the lower left in the FM Radio window.

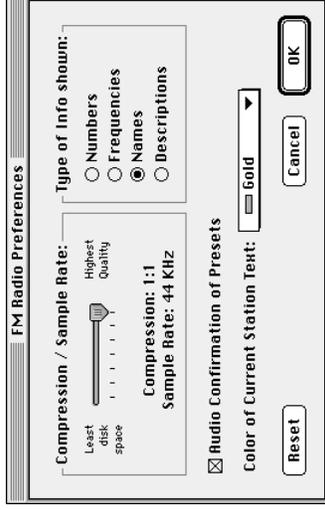

- To turn off the beep you hear when a new station is successfully preset, click in the Audio Confirmation of Presets box to remove the X.  
After you've finished selecting your preferences, click OK to implement the changes. (The window then closes.)
- To undo any changes you made since you last opened the Preferences window, click Reset.

## Recording from the Radio

This chapter gives instructions for using the Apple FM Radio application to record from the FM radio onto your computer's hard disk. It also gives instructions for compressing recordings so that they take up less disk space. You can play back recordings with the SimpleText application, which uses QuickTime technology to play back sound.

You'll need to turn on the radio before following the instructions in this chapter. To turn on the radio, open the Apple FM Radio application program by double-clicking its icon. (The application is in the Apple FM Radio folder, in the Apple Extras folder on your hard disk.)




Apple FM Radio

## Compressing recordings

Before you record, you may want to choose a compression rate for your recording. Recordings that are not compressed have high-quality sound, but they take up a lot of disk space. If you compress a recording, you use less disk space but get a lower-quality sound when you play it back (the recording sounds less clear).

To compress recordings, follow these steps before you record:

- 1 Open the Options menu and choose Preferences. The FM Radio Preferences dialog box appears.

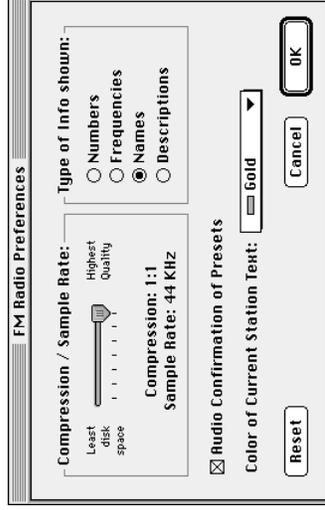

- 2 In the Compression/Sample Rate box, choose the compression rate you want by dragging the slider towards “Least disk space” or “Highest Quality.”

A compression rate of 1:1 means that no compression takes place. A compression rate of 3:1 uses a third of the disk space that 1:1 uses. A compression rate of 6:1 saves the most disk space.

**Remember:** Compression affects the sound quality of your recording: the more compression you use, the less clear your recording sounds.

You can also click anywhere in the track to move the slider.

**Note** The compression ratios possible for your computer may be different from those possible for other computers. (You may not be able to move the slider to certain positions on the slider bar.)

- 3 Click OK.


The compression rate you just chose remains in effect for all recordings until you change the compression rate in the FM Radio Preferences window again.

### Saving recordings


You can record from the radio any time by pressing the Record button in the FM Radio window.

To record from the radio and save it on a disk, follow these steps.

- 1 Be sure to choose a compression rate for your recording, if you want to and haven't done so already. See the previous section, "Compressing Recordings."
- 2 Click the Record button in the FM Radio window.

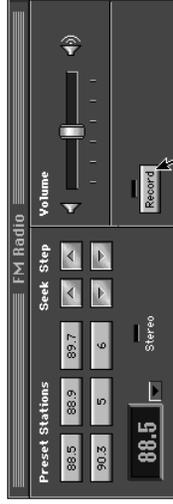


Immediately, the Record button turns into a Stop button and red light, and a "Recording time" counter appears that tells you the length of time that has passed since you clicked Record.

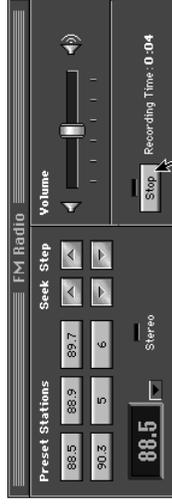

- 3 Click Stop when you want to stop recording.

**Important** If you don't click the Stop button, recording continues until the hard disk is full.

The Save Audio Recording dialog box appears.

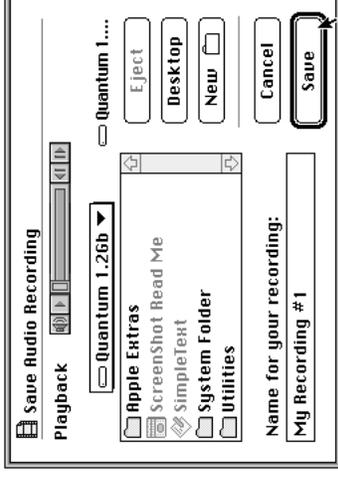

- 4 Specify a name for your recording and the location where you want to save it.

You can also play back a recording and adjust the recording's volume before you save it, using the Playback bar. Click the play (▶) button to play it back and the sound (🔊) button to adjust the volume.

- 5 Click Save.

When you open the recording later (by double-clicking its icon), it opens as a SimpleText document, which uses QuickTime technology to play back the sound at the volume level at which you saved it.

## Watching TV or Video

This chapter contains most of the information you need to use the Apple Video Player application program to watch TV on your computer. You also use Apple Video Player to watch video (from a VCR or video camera, for example) on your computer.

You may find watching TV more convenient if you first set up some of the options discussed in Chapter 6, “Customizing the TV Tuner Settings.”

*See also:* “Viewing the Teletext Window” in Chapter 8 and Chapter 9, “Using the Remote Control.”

## Opening Apple Video Player


To use the Apple Video Player application program, open it by double-clicking its icon. (The application is in the Apple Video Player folder, in the Apple Extras folder on your hard disk.) You can also press the TV/MAC button on the remote control.



### Apple Video Player


**Note** If you can't find the Apple Video Player application on your computer's hard disk, see the section on reinstalling Apple Video Player in Chapter 10, "Troubleshooting."

The first time you open the Apple Video Player application, a message appears asking you to set up your TV channels.

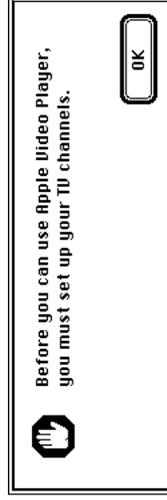

If you see this message, click OK and go to the next section, "Setting Up Your TV Channels."

If your TV channels are already set up, a video window appears. You can watch video or TV in the video window.

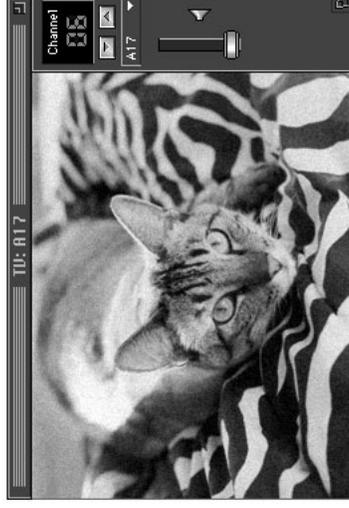

If you've set up your TV channels and still don't get an image in the window right away, see Chapter 10, "Troubleshooting."

## Setting up your TV channels

You can set up your TV channel list to contain channels for any frequency picked up by your antenna (off air) or cable service connection.

There are three ways to set up your TV channel list:

- You can have Apple Video Player automatically assign any valid frequencies to your channel list.
- You can set up your channel list manually.
- You can have Apple Video Player automatically assign any valid frequencies to your channel list, and then you can add or remove additional channels manually.

You must have at least one TV channel set up for viewing, or else a reminder message will be displayed.

**Important** If you want to use Apple Video Player to automatically tune (“auto tune”) your TV channel list, do so before you add or remove channels manually. If you auto tune after you manually add or remove channels, your manual changes will be undone.

### Auto tuning the channel list

Apple Video Player can program your channel list to include all valid channel frequencies from the available signal sources (off air and cable). To have Apple Video Player set up your TV channels automatically, follow these steps:

- 1 Choose Channel Setup from the Setup menu.

**Note** The Channel Setup dialog box will already be open if you are setting up channels for the first time.

- 2 Click Auto Tune.

**Note** Pressing the ⌘ key plus a period (.) cancels Auto Tune.

Scanning can take up to 30 seconds depending on the number of channels available. Valid signals are assigned to the channel numbers in your channel list, from low to high frequencies. The rest are “disabled” and appear in the channel list with a dash (-) next to them.

Although Auto Tune filters out channels that don’t send valid signals, it doesn’t remove duplicate channels or channels that send valid but scrambled signals (for example, pay-per-view or premium cable channels to which you don’t subscribe). Additionally, there may be channels in your viewing area that you would simply prefer not to see when you browse through the channels. For these reasons, you may want to edit your channel list after you’ve used Auto Tune. You can add channels that you didn’t want removed, or remove channels that you don’t want to keep.

### Adding to or editing the channel list


In addition to adding channels to your TV channel list, you can change existing channel settings by assigning the channel a frequency and a name.

To add or edit channels manually, follow these steps:


- 1 Choose Channel Setup from the Setup menu.

If the Channel Setup dialog box is already open, the Setup menu is dimmed and unavailable.

- 2 Select a channel in the TV channel list, then click Edit. Or, double-click the channel number or name in the channel list.
  - To add a new channel, select a channel that has a dash beside it.
  - To edit a channel, select a channel that has either a name or channel frequency already assigned to it.

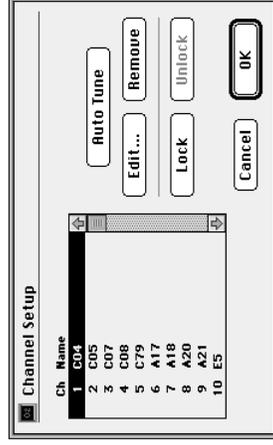


The Edit Channel dialog box for that channel appears.

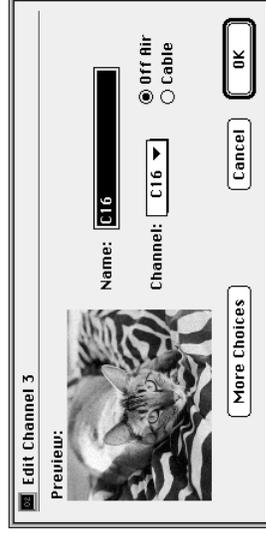

- 3 Click Off Air or Cable.
 

If you use an antenna to receive the frequency you are about to set up, choose Off Air. If you use a cable service to receive the frequency, choose Cable.

- 4 Select a channel frequency from the Channel pop-up menu.

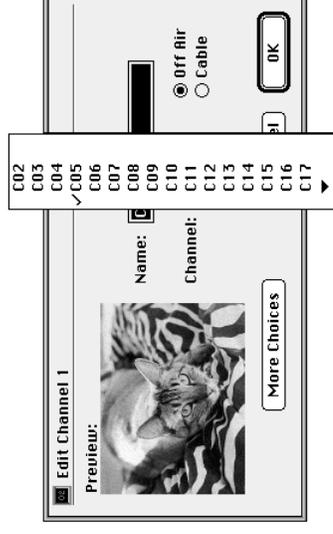

- 5 Type a name for the channel in the Name box.
 

**Note** A channel must be assigned a name. If not, a message appears reminding you of this.

See the section “Giving Names to Channels” in Chapter 6 for more information.

- 6 Click OK to close the Edit Channel dialog box.
 

The channels you’ve added or changed are listed in the channel list.
- 7 Click OK to close the Channel Setup dialog box.
 


The channels you’ve set up are available in the channel name pop-up menu under the channel controls in the video window.

### Removing channels from the channel list

To remove channels manually from the TV channel list, follow these steps:

- 1 Choose Channel Setup from the Setup menu.  
If the Channel Setup dialog box is already open, the Setup menu is dimmed and unavailable.
- 2 Select the channel or channels you want to remove, then click Remove.

To select several channels in a row to remove, hold down the Shift key and drag. To select channels throughout the list, hold down the Shift key and click each channel.

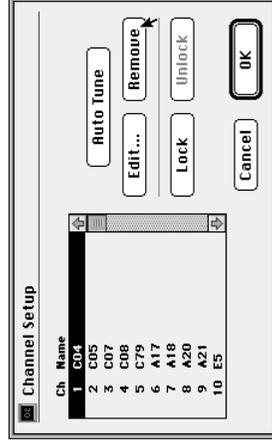

Once a channel is removed, it is replaced by a dash (–) in the channel list.

**Locking channels:** You may want to keep a channel in the channel list but restrict access to it. See both “Locking and Unlocking Channels” and “Creating and Changing a Password” in Chapter 6.

**Fine tuning:** If after setting up you find that you’re unhappy with the reception quality of some channels, you can try to improve the reception by adjusting the tuner manually. See “Fine Tuning your Channels” in Chapter 6.


**Mono Sound:** If a channel’s sound fades in and out, you should set your TV to receive only mono sound for that channel. See “Setting Channels to Monophonic Sound” in Chapter 6.

### Getting help


On-screen help for the Apple Video Player application is available through the Guide menu at the upper-right corner of the screen, marked with the  icon. When Apple Video Player is the active application, choose Apple Video Player Guide from the Guide () menu. Apple Video Player Guide gives you step-by-step instructions for tasks you need help doing.

**Note** Apple Video Player Guide is not available if you have a computer with system software earlier than 7.5.

To see explanations of all the items on the screen when you use Apple Video Player, make sure that Apple Video Player is active, then choose Show Balloons.

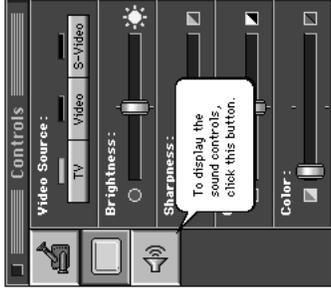

To be reminded of keyboard shortcuts you can use with Apple Video Player, choose Apple Video Player Shortcuts from the  menu.

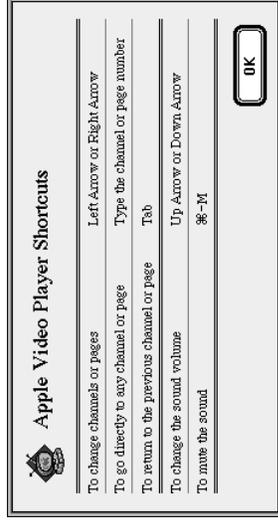

## Using a hot key

You can also open the Apple Video Player application by pressing a “hot key” (a preset key or combination of keys). When you press this hot key, you switch to the Apple Video Player program no matter what computer program you are currently in. To learn how to set a hot key, see “Setting a Hot Key” in Chapter 6.

## Choosing a video source

Using the Apple Video Player application, you can view TV signals that come through a cable or an antenna, or watch a video recording from a VCR or other video device.

To choose a video source, follow these instructions:


- 1 Open the Windows menu and choose Show Controls Window.

The Controls window appears.

- 2 Click the video screen icon.



The screen controls appear.

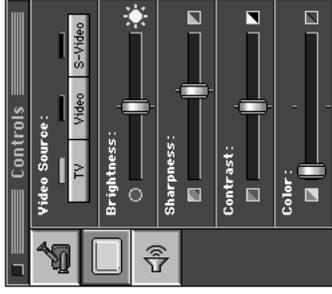

- 3 Click the video source you want to use:
  - If you want to watch TV, click TV.
  - If you want to view video from a VCR or other device that's attached to the composite video input port, click Video.
  - If you want to view video from a VCR or other device that's attached to the S-video input port, click S-Video.

**Note** If you're not sure which port a video device is attached to, see "Determining Which Video Connector You Need" in the section "Connecting Other Video Equipment" in Chapter 1.

The source change takes effect as soon as you make your choice.

## Changing TV channels

When the video source is set to TV and the video window is active, you can use any of the following methods to change channels:

- Click the Up or Down arrow on the video window.
- Select a name from the Names pop-up menu on the video window (if you've given names to channels, as will be discussed in Chapter 6).
- Press the Left Arrow key or Right Arrow key on the keyboard. (Make sure Apple Video Player is the active application, or these keys won't have any effect.)
- Use the channel controls on the remote control. For more information, see Chapter 9, "Using the Remote Control."
- Type the channel number.

When you use an arrow, you go to the next available unlocked channel (a channel with unrestricted access). To go to a locked (restricted access) channel, you must enter a channel number.

To go back and forth between the current channel and the last one to which you were tuned, press the Tab key.

Each time the channel changes, the channel name (if one exists) appears briefly on top of the TV picture.

**Too many channels?** When you browse through channels using the remote control or the arrows on your keyboard or video window, you may see channels that have no picture or that show only static. To skip such channels entirely, see "Removing Channels from the Channel List" in the section "Setting Up Your TV Channels" earlier in this chapter.

## Adjusting the sound

You can adjust the sound's volume, balance, and tone. You can also choose monophonic (mono) or stereophonic (stereo) sound.

### Changing the sound volume

There are four ways to change sound volume:

- Use the volume buttons on the front of the computer.
- Drag the slider next to the speaker icon on the video window.
- Press the Up Arrow key or Down Arrow key on the keyboard. (Make sure Apple Video Player is the active application, or these keys won't have any effect.)
- Use the volume controls on the remote control. For more information, see Chapter 9, "Using the Remote Control."

To mute the sound, click the speaker on the video window, press **M** on the keyboard, or press the muting button on the remote control. To turn the sound back on, click the speaker, press **M**, or press the remote control's muting button. The sound will also go back on if you adjust the volume using any method.

You can also click anywhere in a slider's track to move the slider to that position. The sound adjustments take effect immediately, so you can monitor your changes.

### Choosing a language

Some TV programs offer you a choice of two languages that you can listen to. These are called Dual Language programs.

Language choices generally include your country's native language (Language A), and English (Language B), or two native languages.


To set the language mode, first make sure the video source is set to TV, then follow these steps:

- 1 Choose Show Controls Window from the Windows menu. The Controls window appears.

- 2 Click the sound icon.



The sound controls appear.

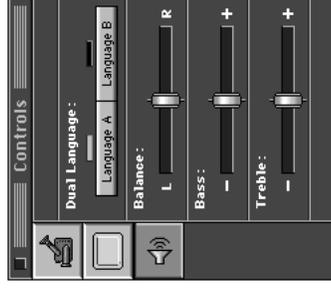

- 3 Click the language you want to listen to (Language A or B). The new setting takes effect immediately (if it's available).


### Adjusting speaker balance and tone

To adjust the speaker balance, bass, or treble:

- 1 Choose Show Controls Window from the Windows menu.
- 2 Click the sound icon.



- 3 Drag the appropriate slider to adjust the sound to your liking.

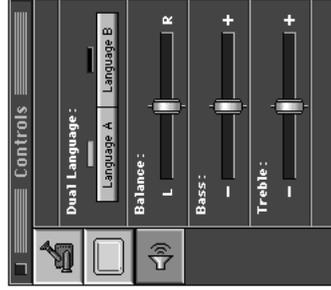

You can also click anywhere in a slider's track to move the slider to that position. The sound adjustments take effect as you make them, so you can monitor your changes.

**Note** You'll only be able to hear changes in balance if you're using external speakers or headphones.

### Adjusting the picture

To adjust the brightness, sharpness, and tint of the picture:

- 1 Choose Show Controls Window from the Windows menu.
- 2 The Controls window appears.
- 3 Click the video screen icon.



The screen controls appear.



- 3 Drag the appropriate slider to adjust the picture to your liking.

You can also click anywhere in a slider's track to move the slider to that position. The picture adjustments take effect as you make them, so you can monitor your changes.

## Customizing the TV Tuner Settings

This chapter explains how to use the Apple Video Player application program to give names to channels, protect channels with a password, and set reminders that notify you when important shows are about to begin.

Before following the instructions in this chapter you need to open the Apple Video Player application by double-clicking its icon. (The application is in the Apple Video Player folder, in the Apple Extras folder on your hard disk.) You can also press the TV/MAC button on the remote control.



### Apple Video Player

*Customizing is optional:* The information and instructions provided in this chapter are meant to make using your TV tuner more convenient. You don't have to customize the TV tuner to watch television on your computer. For the basic information you need about watching TV or video, read Chapter 5.


### Giving names to channels

You can assign a name of up to 15 characters to a channel. The name can be the station's call letters, network affiliation, network name, or anything else you want.

Channel names appear in the Names pop-up menu of the video window. See "Changing TV Channels" in Chapter 5 for information on using a name to select a channel.

Follow these steps to name or rename channels.

- 1 Choose Channel Setup from the Setup menu.
- 2 Select a channel in the TV channel list, then click Edit.  
The Edit Channel dialog box appears, with any name already assigned to the channel selected. (Initially, channels have no names assigned to them.)

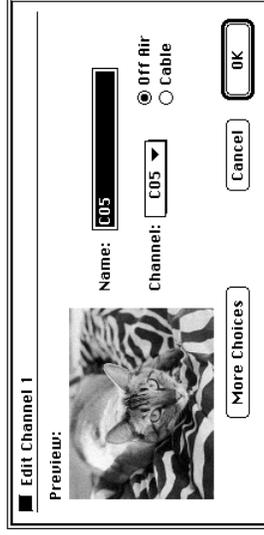


- 3 Type a name for the channel.

To remove a name from the channel, press the Delete key while the entire name is highlighted.

- 4 Click OK.

The name you typed appears to the right of the channel number in the channel list.

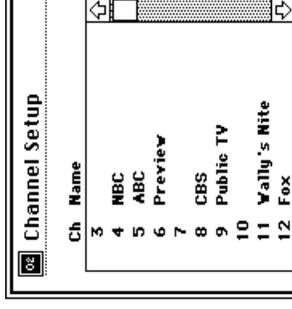


### Fine tuning your channels

If you're unhappy with the reception quality of a channel, you can try to improve the reception by fine tuning the channel manually. First make sure your video source is set to TV, then follow these steps:


- 1 Choose Channel Setup from the Setup menu.
- 2 Select a channel in the TV channel list, then click Edit.  
The Edit Channel dialog box for that channel appears.

- 3 Click More Choices.

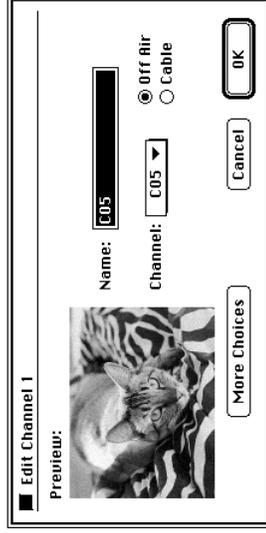

If you do not see the More Choices button, then the Fine Tune slider should already be visible.

- 4 Drag the Fine Tune slider to either side to change the channel reception.

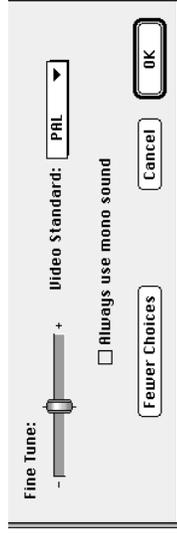


- 5 Click OK to close the Edit Channel dialog box.
- 6 Click OK to close the Channel Setup dialog box.

## Setting channels to monophonic sound

You can set your TV tuner so a channel receives only monophonic (mono) sound (if stereo is not available, then the sound setting will automatically default to mono). If a station signal is weak, setting the sound to mono will prevent the sound from fading in and out. First make sure your video source is set to TV, then follow these steps:

- 1 Choose Channel Setup from the Setup menu.
- 2 Select a channel in the TV channel list, then click Edit. The Edit Channel dialog box for that channel appears.

- 3 Click More Choices.

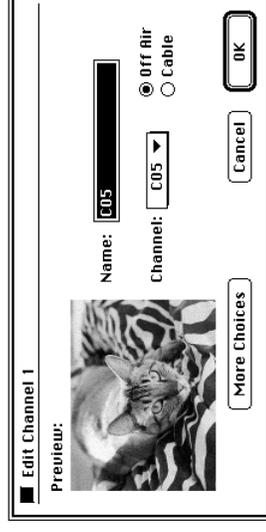

If you do not see the More Choices button, then the “Always use mono sound” checkbox should already be visible.

- 4 Check the box next to “Always use mono sound” (so that an “X” appears).



- 5 Click OK to close the Edit Channel dialog box.
- 6 Click OK to close the Channel Setup dialog box.

### Locking and unlocking channels

Locked channels appear in the channel list but don't appear in the video window when you scan through the channels.

- 1 Choose Channel Setup from the Setup menu.
- 2 Choose from the Connection pop-up menu the connection for the channel list you want.


**Note** You can lock or unlock channels only in the channel list for the connection that's currently chosen. For example, if you lock channel 15 in the antenna channel list, the channel will not lock either in the cable channel list or in the HRC cable channel list unless you name it in those lists, too.

- 3 Select the channels you want to lock by highlighting them. To select several channels in a row, hold down the Shift key and drag. To select channels scattered throughout the list, hold down the Shift key and click each of the channels you want to lock.


You may have to scroll to see all possible choices.

- 4 Click Lock.

The channels you selected are locked. Small locks appear at the left of the locked channels' numbers in the channel list.

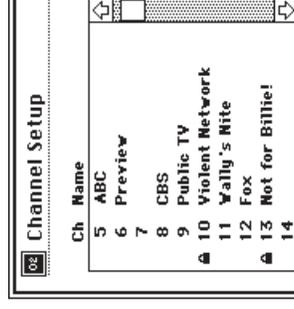

You can watch a locked channel by typing its number on the keyboard. A dialog box appears:

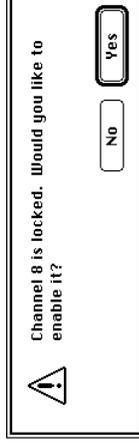


If you click Yes and no password is in effect, you tune in to that channel. However, the channel remains locked and out of the normal scanning sequence. If a password has been set, you must type the password before the channel can become available.

To unlock a channel, choose Channel Setup from the Setup menu, select the channel, and click Unlock.

## Creating and changing a password

You can create a password to limit access to the Channel Setup dialog box and locked channels. When you set a password, anyone choosing Channel Setup from the Setup menu or switching to a locked channel must type the password.

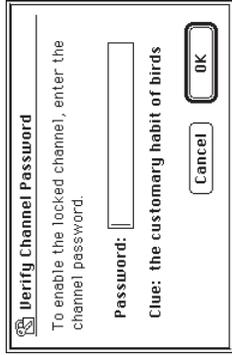


The same password applies to all locked channels.

## Creating a password

Follow these steps to create a password:

- 1 Choose Set Channel Password from the Setup menu.

A dialog box appears.

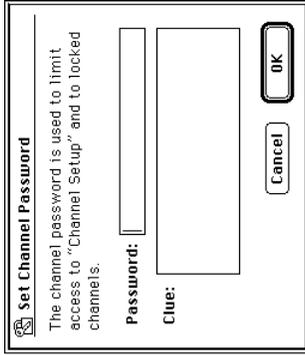

- 2 Type a word or phrase of up to 15 characters.

You can also type a clue to help you remember the password. The clue appears every time anyone seeking access is asked for the password.

If you don't want to have a clue, don't type one.

- 3 Click OK.


Your password is now in effect.

**Important** Make sure you keep a record of your password. If you forget your password, you will have to reset all your customized settings (including channel names and programmed channels) when you invalidate it, as described in "Forgetting a Password," later in this section.

## Changing a password

Follow these steps to change a password:

- 1 Choose Set Channel Password from the Setup menu. A dialog box appears.

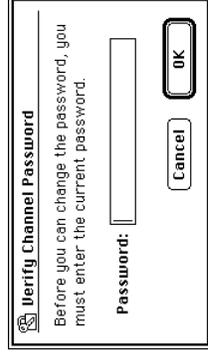

- 2 Type the current password and click OK.

If you've forgotten your password, see "Forgetting a Password," next.

As you type, the characters are replaced by bullets to ensure privacy.

- 3 Type a new password in the Set Channel Password dialog box and click OK.

To remove the password, make sure that the password in the Password text box is selected (highlighted). Then press the Delete key before you click OK.

Your new password is now in effect.

## Forgetting a password

If you enter an incorrect password, you see this dialog box:



If you can't remember your password, you must reset the password and then create a new one.

To reset the password, quit the Apple Video Player application. Then move the Apple Video Player Prefs file to the Trash. The Apple Video Player Prefs file is in the Preferences folder, which is in the System Folder.

**Important** When you move the Apple Video Player Prefs file to the Trash, any preferences you have set (for example, picture contrast or channel names) are changed back to the standard settings provided by the Apple Video Player application.

## Setting and editing TV reminders

You can arrange to have notices appear on your screen to remind you that specific shows are about to begin.

When the time you've set for a reminder arrives, a notice appears on the screen.




The notice appears no matter which application you are using on your computer at the notification time.

If you click OK in this notice, the Apple Video Player application opens, switches to the proper channel, and displays the show in the video window.

### Setting a reminder


To set a reminder, follow these steps:

- 1 Choose TV Reminders from the Setup menu.  
The TV Reminders dialog box appears.

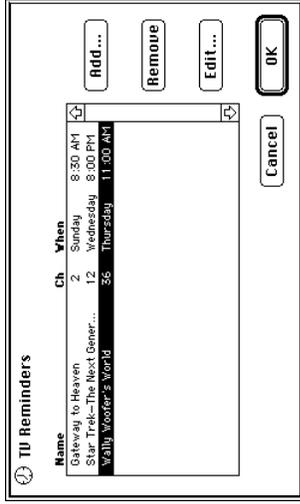

- 2 Click Add.

The Edit Reminder dialog box appears.

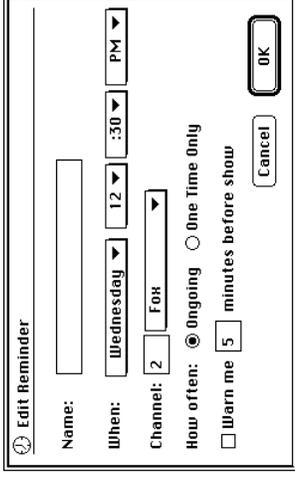

- 3 Type the show's name as you want it to appear in the notice.
- 4 Set the day and time that the show begins.
- 5 Set the channel by typing its number in the Channel number box.  
If the channel has a name, you can select the name in the pop-up menu to the right of the Channel number box.
- 6 Specify whether the reminder should occur on an ongoing basis or just once.  
If you select One Time Only, the reminder will be removed automatically after the show airs.
- 7 If you want an advance notice before the show begins, type the number of minutes before the show starts that you want a warning; then click the "Warn me" checkbox to select it.  
The notice can appear up to 99 minutes before show time.

**8** Click OK.

You'll return to the TV Reminders dialog box, where you'll see your new entry in the list.

**Editing a reminder**

To edit a reminder, follow these steps:

- 1** Choose TV Reminders from the Setup menu. The TV Reminders dialog box appears.
- 2** Select the reminder you want to edit, then click Edit. Or, you can double-click the reminder. The Edit Reminder dialog box appears.
- 3** Make the changes you want to, then click OK. The changes you've made take effect immediately.

**Removing a reminder**

To remove a reminder, follow these steps:

- 1** Choose TV Reminders from the Setup menu. The TV Reminders dialog box appears.
- 2** Select the entry you want to remove.  
**Important** There is no Undo function for the Remove command. To restore an entry that you have removed, you must reenter all the settings you made in the Edit Reminder dialog box.
- 3** Click Remove. The entry is removed immediately.
- 4** Click OK to close the TV Reminders dialog box.

**Setting a hot key**

You can turn on the Apple Video Player application by pressing a “hot key” (a preset key or combination of keys). When you press this hot key, you switch to the Apple Video Player application no matter what application you are currently in. If the Apple Video Player is already the active application, you can press the hot key to quit it.

To set a hot key, follow these instructions:

- 1** Choose Hot Key from the Setup menu. The Hot Key dialog box appears.
- 2** Press the key or key combination you want to use for your hot key. You can use one or more (up to four) of the modifier keys—⌘, Option, Control, and Shift—plus any other key. Don't use a key combination that is already used by other programs. For example, don't use ⌘-P, which is for printing in most programs.
- 3** Click OK. Your new hot key is ready to use. If you find that your hot key replaces a keyboard shortcut in another program, repeat these steps to choose another hot key.

## Capturing TV or Video Images

This chapter gives instructions for using the Apple Video Player application program to capture

- individual (still) images
- sequences of moving images (as QuickTime movies)

The images in the video window can come from the TV tuner or from video equipment connected to your video input card.

Before following the instructions in this chapter you need to open the Apple Video Player application by double-clicking its icon. (The application is in the Apple Video Player folder, in the Apple Extras folder on your hard disk.) You can also press the TV/MAC button on the remote control.



Apple Video Player

## Capturing individual images

You have two ways to capture a single image—by using the capture controls in the Controls window or by using the Copy Video Display command in the Edit menu.

### Capture controls

When you use the capture controls in the Controls window, you can freeze the screen image before you save it.


Additionally, the capture controls let you save the image directly on a disk.

Follow these steps:

- 1 Choose Show Controls Window from the Windows menu. The Controls window appears.
- 2 Click the video camera icon.



The capture controls appear.

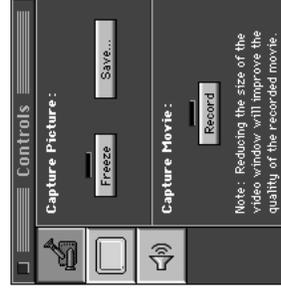

- 3 Wait until you see the image you want to capture.

The Controls window can remain open without affecting what happens in the video window.

- To freeze the video image at the current frame, click Freeze. The video freezes, and you can decide whether you want to save the current frame. To unfreeze the video, click Freeze again.
- To save the current video frame on a disk, click Save.

If the video isn't already frozen, it freezes at the current frame until you complete the Save operation.

A dialog box appears so you can specify where to save the image. When you click Save, the image is saved as a PICT file under the name that you supply. (A PICT file can be opened by most graphics programs.)

### Copy Video Display command

To capture the current screen image by copying, choose Copy Video Display from the Edit menu or press ⌘-C.

**Important** When you use Copy Video Display or press ⌘-C, the current screen image is copied to the Clipboard. The image is not saved on a disk. (To save an image that's on the Clipboard, you must paste it into a document or the Scrapbook.)


## Capturing movies

You can capture video sequences (moving images) as QuickTime movies.

Video capture does not work as well with virtual memory on. For best results, turn off virtual memory. To check whether it is on or not, open the Memory control panel. If the On button for virtual memory is selected, click the Off button to turn virtual memory off.

To capture video images, follow these steps:

- 1 Choose Show Controls Window from the Windows menu. The Controls window appears.
- 2 Click the video camera icon. The capture controls appear.

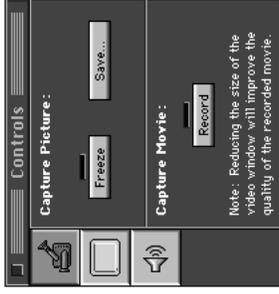

- 3 Wait until the sequence that you want to capture begins. The Controls window can remain open without affecting what happens in the video window.

- 4 Click Record.

Recording begins and the Record button changes to a Stop button.

- 5 Click Stop when you've recorded as much as you want.

**Important** If you don't click the Stop button, recording continues until the hard disk is full.

A dialog box appears, in which you can specify a name and location for your movie.

You can also preview the QuickTime movie before you save it.


*Use as small a size as you can.* The amount of disk storage that a movie takes is directly related to the size of the video window—the larger the window, the more disk space you use. By choosing Smallest Size from the Windows menu before you record, you may be able to save more than 50 percent in storage space. (A movie that uses about 75 megabytes per minute at the normal video window size will use only about 35 megabytes per minute at the smallest video window size.) See “Changing the Video Window Size” in Chapter 8.

You can open the movie from within any application that supports QuickTime, such as SimpleText. (QuickTime is a system software extension that comes with your computer.)

## Using compression

With compression you can store movies in a much smaller space than they would normally require. To use compression, follow these steps before you record a movie:

- 1 Choose Preferences from the Setup menu.  
The Preferences dialog box appears.

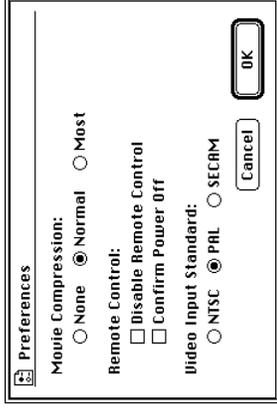

- 2 Click one of the buttons under Movie Compression.  
*None* means that no compression takes place. *Normal*, the preset choice, uses anywhere from 12 to 50 percent of the disk space that *None* uses; the less movement in each frame of the movie, the greater the savings. *Most* uses slightly less disk space than does *Normal*.

To save the most space you can, choose the smallest size video window and the most compression.

**Note** Compression affects picture quality: the more compression you use, the grainier the picture.

## Other Features

This chapter gives instructions for using the following special features of the Apple Video Player application program:

- viewing the Teletext window
- changing the size of the video window
- changing the color of the windows
- setting the video input standard (PAL, NTSC, or SECAM)

Before following the instructions in this chapter you need to open the Apple Video Player application by double-clicking its icon. (The application is in the Apple Video Player folder, in the Apple Extras folder on your hard disk.) You can also press the TV/MAC button on the remote control.




Apple Video Player

## Viewing the Teletext window

Some television channels offer a feature called Teletext that displays information such as programming schedules, news, or financial data. You can view both the Teletext window and TV or video window at the same time. Different channels may display different Teletext information, and some do not display any Teletext information.

You can access the Teletext window for the current channel by choosing Show Teletext Window from the Windows menu, or pressing the **⌘** key plus the letter “T” on your keyboard. You can close the Teletext window by choosing Hide Teletext Window, pressing the **⌘** key plus the letter “T,” or by clicking the Teletext window’s close box.

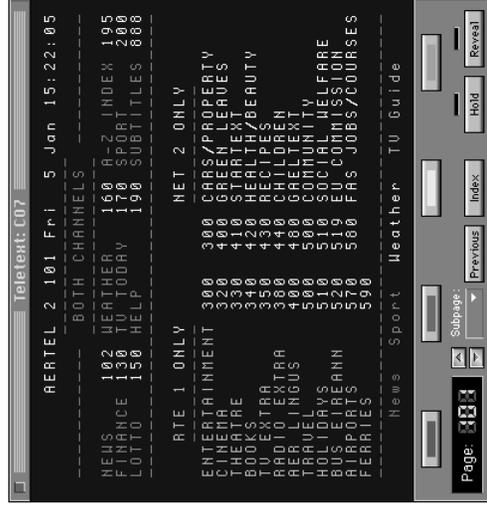

If Teletext information is not available, the Teletext window will be empty, and a message will be displayed.

**Note** Poor reception may result in missing characters in the Teletext window.

## Changing Teletext pages

You can read through the Teletext information by using the page controls, the Index button, or the Previous button in the Teletext window, or by using your keyboard.

**Note** On some channels, the Index button changes to a Table of Pages (TOP) button. See “Using TOP to Access Teletext Pages,” later in this section.

First choose Show Teletext Window from the Windows menu. Then do the following:

- To change pages, click the up or down arrow in the Teletext window. Or, type the three-digit page number on your keyboard. You can also double-click the three-digit page number on the Teletext index page.
- To return to the most recently viewed Index page, click the Index button.

**Note** The Teletext window displays each page of information as it is received by your TV tuner. To prevent the current page from being updated, click the Hold button at the bottom of the Teletext window. Click Hold again to resume page updating.

- To return to pages you have already seen, click the Previous button. This button moves you backward, up to twenty pages. A dimmed Previous button means that there are no more previous pages, or you have already seen twenty previous pages.
- To view a subpage of the page you’re viewing, click the Subpage pop-up menu and choose the subpage you want to view. If this button is dimmed, there are no subpages.

### Using Fastext to access Teletext pages

Fastext is another way to quickly access Teletext pages (This option may not be always available). Fastext is controlled by colored buttons located above the Index, Hold and Reveal buttons, labeled with corresponding colored topics above them.

Click one of the colored Fastext buttons to move to the related topic.



### Using TOP to access Teletext pages

Some channels display a Table of Pages (TOP) page in place of an Index page. TOP is a Teletext standard used in many countries in Europe. When a channel broadcasts Table of Pages data, a TOP button appears where the Index button was. A TOP page groups subheadings under main headings.



To view the topics under headings in the TOP page: click on the arrow beside a heading or subheading.

To display page numbers next to the topics: click on the Reveal button.

To go the topic's page: click on the topic or page number in the Teletext window.

### Revealing Teletext answers

Sometimes the Teletext window displays questions or riddles for you to answer. You can see the answers to these questions by clicking the Reveal button at the bottom of the Teletext window.

First choose Show Teletext Window from the Windows menu. When you see a question in the Teletext window, click the question, then click the Reveal button to see the answer.

**Note** When you click the Reveal button while Table of Pages data is displayed in the Teletext window, page numbers appear next to the topics in the window.

### Printing the Teletext page

You can copy the current Teletext page to the Clipboard, and then paste it into a document for printing. Depending on whether you use a word-processing or graphics program, it will paste as a text or PICT file, respectively.

First choose Show Teletext Window from the Windows menu. Then choose Copy Teletext Display from the Edit menu. The current page is copied to the Clipboard.

Copying a page to the Clipboard does not permanently save the page. You must paste the Clipboard image into a document or the Scrapbook to save the page for later use or printing.


### Changing the video window size

There are several ways to change the size of the video window. You can choose a command from the Windows menu, use a keyboard shortcut for the three most common sizes, click the zoom box, drag the size box, or use the remote control. All but the last way are explained in this section. The remote control is explained in Chapter 9.

### Choosing menu commands

You can choose different video window sizes from the Windows menu:

- Smallest Size uses about 1/16 of the screen.
  - Normal Size uses about 1/4 of the screen.
  - Largest Size uses as much of the screen as it can.
- On monitors that are 640 by 480 pixels or smaller, Largest Size hides both the menu bar and the screen controls. Moving the mouse makes the menu bar visible.
- Other Size opens a dialog box in which you can enter the size you want.

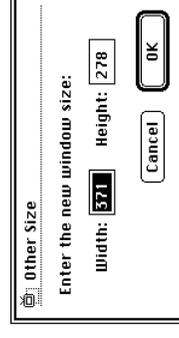

Width must be in the range 160 to 640 pixels. Height must be in the range 120 to 480 pixels.

**Keep your proportions:** The usual video window width-to-height ratio is about 4 to 3. Setting other proportions distorts the video image.

### Using keyboard shortcuts and the zoom box

There are three keyboard shortcuts for changing the video window size:

- ⌘-1 sets the smallest size.
- ⌘-2 sets normal size.
- ⌘-3 sets the largest size.

To alternate between the current size and the largest size, click the zoom box.

### Dragging the size box

If you drag the size box, the horizontal and vertical dimensions of the screen change proportionally.

If you drag the size box while holding down the Shift key, the image becomes distorted. (It stretches or shrinks in the direction that you drag.)

### Changing the window color

You can set a new color for the border surrounding the video window by choosing Window Color from the Windows menu. The current color is checked. The choices are Dark Gray, Green, Blue, Magenta, Red, and Gold.

**“Window Color” is not the display color:** The Window Color command has no effect on the colors you see in the video window. For information on setting the brightness, sharpness, and tint in the video window, see “Adjusting the Picture” in Chapter 5.

### Setting the video input standard


The video input standard determines how the Apple Video Player application interprets video signals. This standard is preset to your region in the Apple Video Player software. In most cases, you won’t need to change it.

NTSC is the standard video signal for most of the Americas and Japan. PAL is common in Western Europe, Australia, most of Asia, and parts of South America and Africa. SECAM is used in France, Eastern Europe, and parts of Asia and Africa.

To change the video input standard, follow these steps:

- 1 Choose Preferences from the Setup menu.

The Preferences dialog box appears.

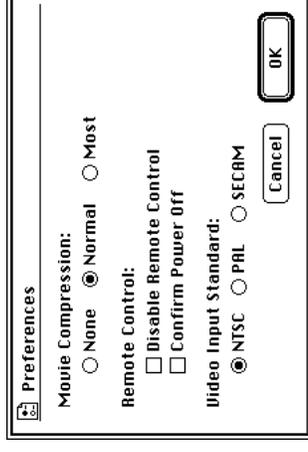

- 2 Choose the Video Input Standard setting you need.

If the setting you choose produces a strange image (for example, the picture is too small or the colors are odd), try another setting.

## Using the Remote Control

You can use your remote control to


- turn the computer on and off
- switch easily between watching TV or video, and using other computer application programs
- switch from listening to radio to listening to a CD (if your computer has a CD-ROM player)
- control the sound of the radio or TV
- change TV channels or radio stations
- manipulate the size of the video window

If your computer has a CD-ROM player, you can also use the remote control to

- control the sound from an audio CD
- stop and eject a CD or CD-ROM disc
- pause and continue play of an audio CD
- move to the previous track of an audio CD
- move to the next track of an audio CD

Before using the remote control, install the batteries that are included in your package.

## Controlling your FM radio

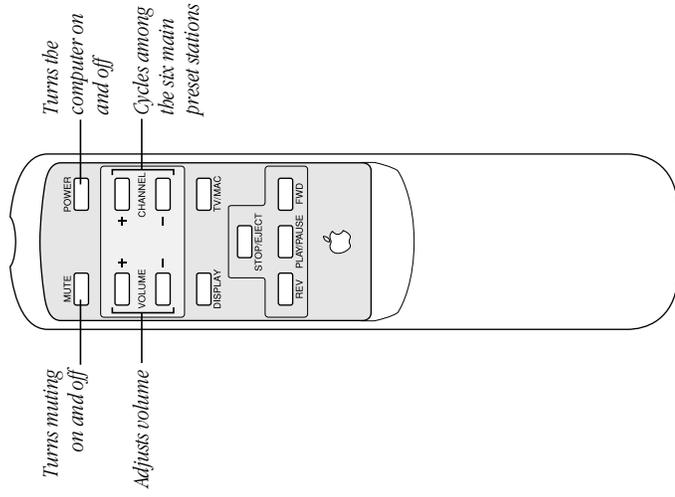


**Note** Your remote control may look different from the one shown here, but it includes the same buttons.

You cannot use the remote to switch to the Apple FM Radio from another application. However, while you hear the radio the FM radio remote controls will work.

When you press the TV/MAC button while the radio is playing, the Apple Video Player application starts, but you won't hear the TV or video until you quit the Apple FM Radio application.


If you are playing an audio CD in a CD-ROM drive, you hear the audio CD and the TV or FM radio sounds simultaneously.

## Controlling TV or video

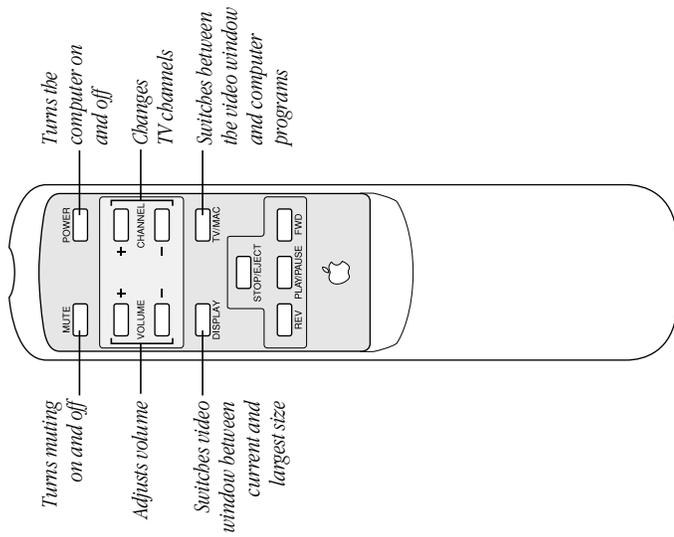

**Note** Your remote control may look different from the one shown here, but it includes the same buttons.

## Controlling your CD-ROM player

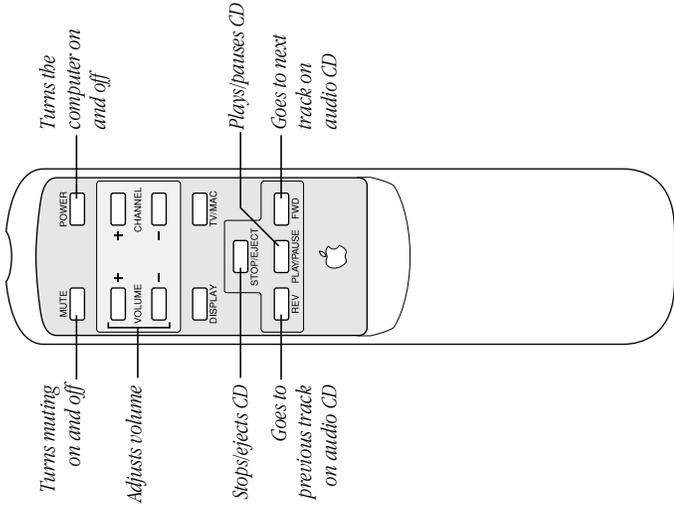


**Note** Your remote control may look different from the one shown here, but it includes the same buttons.

## Setting preferences

You can set these preferences for the remote control: whether the remote control is on or off, and whether or not a confirmation box appears when you press the remote control's Power button to shut down the computer.

- 1 Choose Preferences from the Setup menu.  
The Preferences dialog box appears.

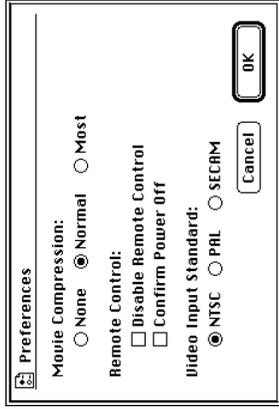

- 2 To turn off the remote control, click the Disable Remote Control checkbox to put an X in it.  
If this checkbox is selected, the remote control won't work.  
To turn the remote control back on, click the checkbox to remove the X.
- 3 To make a confirmation box appear so you can change your mind about shutting down the computer when you press the remote control's Power button, click the Confirm Power Off checkbox to put an X in it.  
If you no longer want to see the confirmation box, click the checkbox to remove the X.
- 4 Click OK.  
The changes take effect immediately.

## Troubleshooting

This chapter suggests what to do if problems occur when you're using the Apple Video Player or FM Radio software.

**Warning** If you have a problem with your Apple equipment and nothing presented in this chapter or in the documentation that came with your computer solves it, consult the service and support information that came with your Apple equipment for instructions on how to contact an Apple-authorized service provider or Apple for assistance.

If you attempt to repair the Apple equipment yourself, any damage you may cause to the Apple equipment will not be covered by the limited warranty on your Apple equipment. Contact an Apple-authorized dealer or service provider for additional information about this or any other warranty question.

## Problems listening to the radio

### You can't find the Apple FM Radio application.

If the Apple FM Radio application is not anywhere on your hard disk, you need to install it.

You install Apple FM Radio from your system software CD, system software disks, or the *Apple TV/FM Software Installation* CD, depending on the disks or CDs you received with your equipment.

- 1 Start the computer.
- 2 Insert the CD or disk that contains the Apple FM Radio application.
  - If you purchased your computer with the TV/FM tuner card already installed, locate either the system software CD or the set of system software floppy disks (whichever came with your computer). If you have a system software CD, insert it into the CD-ROM drive. If you have a set of system software floppy disks, insert the first disk (labeled something like *Install Disk 1* or *System Backup Disk 1*) into the floppy disk drive.
  - If you purchased the *Apple TV/FM Radio System* kit separately from your computer, insert the *Apple TV/FM Software Installation* CD into the CD-ROM drive.

- 3 Double-click the CD or disk icon to open it (if its window is not already visible).

- 4 Double-click the Installer icon.

- 5 Install the Apple FM Radio application.

- If you are installing from the *Apple TV/FM Software Installation* CD, click Install and follow the instructions on the screen.
- If you are installing from your system software CD or disks, click Custom Install. Select Apple FM Radio from the software list that appears, and then click Install.

The Apple FM Radio application is installed on your hard disk (in the Apple FM Radio folder in the Apple Extras folder).

- 6 When installation is complete, click Restart.

### You don't hear anything when you open the Apple FM Radio application.

- Be sure your FM antenna is securely connected to the FM port (the left port) on the TV/FM tuner card and the antenna is raised high. See the appropriate section in Chapter 1, "Connecting Antennas, Cable, and Other Video Equipment."
- The radio sound doesn't work if Video or S-Video is selected in the Apple Video Player application (even if that application isn't currently open). Open the Apple Video Player application and choose Show Controls from the Windows menu. Click the video screen icon (the second button down on the left). Choose TV as your video source. You can then quit the Apple Video Player application. Now when you open the Apple FM Radio application, you will hear radio.
- Be sure the volume on your computer is turned up. Use the volume buttons on the front of your computer if you have them, or use the sound-related control panel to adjust the volume. (For more information on adjusting volume, see Macintosh Guide if it is available on your computer or the printed manuals that came with your computer.)

- You may need to broaden the signal range or strength. Make sure the Apple FM Radio application is active. Open the Options menu, choose Signal Range or Signal Strength, and choose “DX” for Signal Range and “All Stations” or “All Except Weakest” for Signal Strength. For instructions on choosing a signal range or strength, see Chapter 3, “Customizing the FM Radio Settings.”

**The reception is poor.**

- Adjust the FM antenna (connected to the left port on the TV/FM tuner card). Be sure it is securely connected to the port and raised high.

**The remote control doesn't work.**

- Make sure the remote control has a battery, or try changing the remote control's battery.
- Try moving closer to your computer. If you are already very close to the computer, point the remote control directly at the remote control receiver on the front of the computer.
- The checkbox labeled Disable Remote Control may be selected in the Preferences dialog box in your TV application. Open Apple Video Player and choose Preferences from the Setup menu. Deselect the Disable Remote Control checkbox (click to remove the X).

**You can't switch to radio using the remote control, or quit the radio using the remote control.**

- There isn't a way to turn the radio on or off using the remote control.

**When you click Seek or Auto Add, the Apple FM Radio finds either too few or too many stations.**

- If the Apple FM Radio is finding too few clear stations, adjust the FM antenna (the one connected to the left port on the TV/FM tuner card) while the radio is playing to see if certain stations come in clearer.
- If the Apple FM Radio is finding “fuzzy” stations when it scans or adds stations, you may need to narrow the signal range or strength. Make sure the Apple FM Radio is active. Open the Options menu, choose Signal Range or Signal Strength, and choose another setting. See what that does to the Scan and Auto Add features. Experiment with different settings to see which setting eliminates the stations you don't want. For instructions on choosing a signal range or strength, see Chapter 3, “Customizing the FM Radio Settings.”

## Problems watching TV or video

### You can't find the Apple Video Player application

If the Apple Video Player application is not anywhere on your hard disk, you need to install it.

You install Apple Video Player from your system software CD, system software disks, or the *Apple TV/FM Software Installation* CD, depending on what disks or CDs you received with your equipment.

- 1 Start the computer.
- 2 Insert the CD or disk that contains the Apple Video Player application.
  - If you purchased your computer with the TV/FM tuner card already installed, locate either the system software CD, or the set of system software floppy disks (whichever came with your computer). If you have a system software CD, insert it into the CD-ROM drive. If you have a set of system software floppy disks, insert the first disk (labeled something like *Install Disk 1* or *System Backup Disk 1*) into the floppy disk drive.
  - If you purchased the *Apple TV/FM Radio System* kit separately from your computer, insert the *Apple TV/FM Software Installation* CD into the CD-ROM drive.

- 3 Double-click the CD or disk icon to open it (if its window is not already visible).

- 4 Double-click the Installer icon.

- 5 Install the Apple Video Player application.

- If you are installing from the *Apple TV/FM Software Installation* CD, click Install and follow the instructions on the screen.
  - If you are installing from your system software CD or disks, click Custom Install. Select Apple Video Player from the software list that appears, and then click Install.
- The Apple Video Player application is installed on your hard disk (in the Apple Video Player folder in the Apple Extras folder).

- 6 When installation is complete, click Restart.

### Your remote control doesn't work.

- The checkbox labeled Disable Remote Control may be selected in the Preferences dialog box. Choose Preferences from the Setup menu and deselect this checkbox (click to remove the X).
- Try changing the remote control's battery.
- Try moving closer to your computer. If you are already very close to the computer, point the remote control directly at the remote control receiver on the front of the computer.

### You can't switch to TV when you press the TV/MAC button on the remote control.

- You may not have selected TV as your video source. Choose Show Controls Window from the Windows menu and click the TV Video Source button.
- The Power button on your remote control doesn't work.**
- You may have left a dialog box open. Close any open dialog box, then try the Power button again.

**You see static or a blank screen when you try to watch TV or video.**

- Be sure your video equipment is securely connected to the appropriate video input port and your equipment is turned on.
- Be sure your antenna or cable service is securely connected to the coaxial port on the TV tuner card.
- You may have the wrong video source selected. Go to the screen controls in the Controls window and click the appropriate Video Source button.
- Some static may result from poor reception over an antenna, or from problems with cable service. Review the instructions that came with your antenna or cable, or call the supplier for assistance.

**The image is too small or it's filled with odd colors.**

- The video input standard is set incorrectly. Choose Preferences from the Setup menu and select a different setting.

**You see a message that the built-in digitizer cannot display video in the current monitor setting.**

- Reduce the number of colors or levels of gray your monitor displays, using the control panel for monitors. (For more information on adjusting a monitor, see Macintosh Guide if it is available on your computer, or the print manuals that came with your computer.)

**You don't hear the TV, or you hear the radio instead of the TV.**

- Make sure you have quit the Apple FM Radio application. To do so, click the FM Radio window to make it active, then choose Quit from the File menu. (You can watch TV and listen to the radio at the same time, but the radio sound takes precedence.)
- Be sure the volume on your computer is turned up. Use the volume buttons on the front of your computer if you have them, or use the sound-related control panel to adjust the volume. (For more information on adjusting volume, refer to Macintosh Guide if it is available on your computer, or to the print manuals that came with your computer.)

**Unexpected things happen when you try to switch modes using a keyboard shortcut.**

- If you can switch between TV and computer using the remote control, but have trouble switching using the keyboard, check the hot key by choosing Hot Key from the Setup menu. Be sure the key combination is not used by one of your other programs. For instance, in most Macintosh programs ⌘-P sends a document to the printer. On the desktop, ⌘-N creates a new untitled folder.

**You have a cable service and you can't see any channels above channel 13.**

- Some cable services use HRC cable frequencies instead of standard cable frequencies. If you can't receive channels above channel 13, choose Channel Setup from the Setup menu and select HRC Cable from the Connection pop-up menu.

**You can't see the Names pop-up menu on the video window.**

- You haven't given a name to any channel. See "Giving Names to Channels" in Chapter 6.
- You may have the wrong signal source selected. Each signal source (antenna, or standard or HRC cable) has its own channel list and potential list of channel names. Choose Channel Setup from the Setup menu and make a different choice from the Connection pop-up menu.
- If you had to reset your password because you forgot it, any names you entered earlier for channels were erased. You need to enter the names you want again. See "Giving Names to Channels" in Chapter 6.

**You can't see the volume slider on the video window.**

- The video window is too small or too large. Change the size by making a choice from the Windows menu or by dragging the size box.

**Your password doesn't work, or you forgot your password.**

- See "Forgetting a Password," in the section "Creating and Changing a Password" in Chapter 6 for instructions on invalidating a forgotten password so that you can create another password.

**The image is too white or too dark.**

- Adjust the video screen controls. (Choose Show Controls Window from the Windows menu and click the video screen icon.)
- If you have a VCR connected to your video input card, make sure you're not having a problem with the videotape or the VCR itself. (Connect the VCR back to your TV and play the tape to see if the image is still bad.)
- The voltage output of your video equipment may be too high or too low for the video input card. Therefore, your video equipment may be sending video signals that are too strong (causing a white picture) or too weak (causing a very dark picture) for the video input card. Try connecting different video equipment to the card.

**You have a dark or "rolling" picture.**

- Adjust the video screen controls. (Choose Show Controls Window from the Windows menu and click the video screen icon.)
- If you have a VCR connected to your video input card, make sure you're not having a problem with the videotape or the VCR itself. (Connect the VCR back to your TV and play the tape to see if the image is still bad.)
- If your computer is also connected to a secondary monitor, make sure that your connection goes from the VCR to the monitor, *ending* at the video input card. (The connection must end at the video input card, not the secondary monitor.) Also check that your secondary monitor is set to loop-through (also known as "Hi-Z") input.

**The sound is intermittent or clipped.**

- Turn down the volume controls on your video equipment. They may be set too high for the video input card.
- The voltage output of your video equipment may be too high for the video input card. Therefore, your video equipment may be sending signals that are too strong for the video input card. Try connecting different video equipment to the card.

**The sound is full of static.**

- Adjust the sound controls in the Controls window. (Choose Show Controls Window from the Windows menu and click the sound icon.)
- Turn up the volume controls on your video equipment.

- A**
- alert sounds A37
- answers
  - to problems A102–A112
  - to riddles (Teletext) A90
- antennas
  - connecting A2–A11, A108
  - setting up frequencies for A50
- Apple FM Radio folder: A22, A27, A39, A85
- Apple FM Radio Guide A23
- Apple FM Radio icon: A22, A27, A39, A85
- Apple service and support: A101
- Apple TV/FM Radio
  - application. *See also* FM radio; TV
  - installing for FM radio: A102–A103
  - installing for TV: A106–A107
  - opening: A22
- Apple TV/FM Radio System Installation Manual*: A1
- Apple Video Player
  - application
    - capturing individual images: A80–A81
    - capturing movies: A82–A84
- choosing video source: A55–A56
  - help: A53–A54
  - icon: A46–A47, A63, A79
  - installing: A106–A107
  - opening: A46–A47, A63, A79, A85
  - problems finding: A106–A107
  - setting up channel list: A48–A53
  - Shortcuts: A54
  - using hot keys: A55
  - video input standard: A93
- Apple warranty: A101
- audio cables, with RCA plugs: A14
- audio CD, playing: A97, A99
- audio out ports
  - using RCA plugs: A16–A17
  - using S-video connectors: A19
- audio recordings, saving: A42–A43
- auto tuning
  - canceling: A49
  - TV channel list: A48–A49

- B**
- balancing speakers A60
  - batteries, for remote control
    - A95, A107
  - beep, turning off A38
  - blank screen A108
  - buttons
    - Hold (Fasttext) A88
    - Preset Station A28–A34
    - Record A42
    - Reveal (Fasttext) A88
    - Stop A42–A43
    - Table of Pages (TOP), in Teletext window A87
    - TV/MAC A46, A98, A107
- C**
- cables
    - connecting audio and video
      - RCA plug A14–A16
      - S-video A17–A19
    - cable service
      - connecting
        - compact computers A3
        - modular computers A7
        - tower computers A10
      - color
        - for frequencies A37
        - for text in Current Station box A38
      - communications regulation information iv–v
      - compact computers,
        - attaching antennas A2–A4
      - composite connectors A13
      - compression
      - movies A84
      - recordings A38, A40–A41
- D**
- date, resetting A4
  - digitizer, problems with video display A108
  - discs (CDs)
    - Apple FM Radio
      - application A102
      - Apple Video Player
        - application A106–A107
    - disk space, conserving A40–A41, A83
    - Dual Language programs A58–A59
- E**
- Edit Channel dialog box A64, A66
  - editing TV channel list A49–A51
  - error message, selecting TV as video source A22
- F**
- Fasttext, using with Teletext A88
  - fine tuning channels A65–A66
  - floppy disks for system software A102, A106
  - FM antenna
    - adjusting for reception A104
    - attaching
      - compact computers A2–A4
      - modular computers A6–A8
      - tower computers A9–A11
- computers**
- attaching card to compact A2–A4
  - attaching card to modular A6–A8
  - attaching card to tower A9–A11
  - switching from video window A98
  - turning off A2, A6
  - using remote control A95–A99
  - connecting
    - antennas
      - compact computers A2–A4
      - modular computers A6–A8
      - tower computers A9–A11
    - audio and video cables A14–A19
    - cable service
      - compact computers A2–A4
      - modular computers A6–A8
      - tower computers A9–A11
    - video equipment A12–A19
  - connectors, composite A13
  - copying video images A81
  - Copy Teletext Display option (Edit menu) A90
- CDs**
- Apple FM Radio
    - application A102
  - Apple Video Player
    - application A106–A107
    - for installing software A102–A103
    - playing A97, A99
  - channel list
    - adding to or editing A49–A51
    - lock indicators A69
    - problems with A110
    - using Apple Video Player to tune A48–A49
  - Channel Setup dialog box A48, A69
  - channels. *See* TV channels
  - Clipboard
    - copying an image to A81
    - using to print Teletext pages A90
  - coaxial cable
    - connecting
      - compact computers A3
      - modular computers A7
      - tower computers A10
  - color
    - for frequencies A37
    - for text in Current Station box A38
  - communications regulation information iv–v
  - compact computers,
    - attaching antennas A2–A4
  - composite connectors A13
  - compression
  - movies A84
  - recordings A38, A40–A41


- reception
  - compact computers A4
  - modular computers A8
  - tower computers A11
- FM port
  - compact computers A2
  - modular computers A6
  - tower computers A9
- FM radio
  - adjusting sound A25–A26
  - attaching antenna
  - compact computers A2–A4
  - modular computers A6–A8
  - tower computers A9–A11
- changing preset stations A35
- installing application software A102–A103
- poor reception A104
- presetting stations A28–A35
- problems finding
  - application on hard disk A102–A103
  - problems hearing A103–A104
  - problems using remote control A104
  - problems with Seek or Auto Add A105
  - recording from A39–A43
  - remote control A96–A97
  - setting preferences for buttons A34
  - tuning in stations A24–A25
  - turning on and off A22–A23, A27, A39
- FM Radio Preferences
  - window A34, A40
- FM Radio window A42
- foreign language, choosing A58–A59
- freezing and saving screen images A80–A81
- frequencies
  - assigning A29–A31
  - displaying in color A37
  - displaying on buttons A33
  - typing in A35
- G**
  - Guide menu A23, A53
- H**
  - help
    - with Apple FM Radio application A23
    - with Apple Video Player A53
  - Hold buttons (Fastext) A88
  - hot keys
    - Apple Video Player A55, A77
    - problems A109
- I, J**
  - icons
    - Apple FM Radio A22, A27, A39, A85
    - Apple Video Player A46–A47, A63, A79
    - FM port A2, A6, A9
    - TV port A3, A7, A10
    - video camera A80
    - video screen A55
  - images
    - capturing movies A82–A83
    - capturing single A80–A81
- Index page, Teletext A89
- installing
  - Apple FM Radio application A102–A103
  - Apple Video Player application A106–A107
  - interference iv–v
- K**
  - keyboard shortcuts
    - problems A109
    - reminder A54
    - using to access Teletext information A87
- L**
  - languages, choosing A58–A59
  - laserdisc player, connecting A12–A19
  - locking TV channels A68–A69
- M**
  - message, selecting TV as video source A22
  - modular computers,
    - attaching antennas A6–A8
  - monitor
    - built-in A1
    - problems with settings A108
  - monophonic (mono) sound
    - selecting A26, A53
    - setting TV channels to A67–A68
  - movies
    - capturing A82–A84
    - compression options A84
    - mute button A58, A97–A99
- N**
  - naming TV channels A64–A65
  - NTSC video signal A93
- O**
  - Off Air (antenna) frequency reception A50
- P**
  - page controls for Teletext information A87
  - password
    - creating and changing A70–A72
    - forgetting A73
    - unlocking channels A69
  - PICT files A90
  - picture
    - adjusting A61
    - problems A108, A111
    - quality A84
  - ports
    - compact computers A2–A3
    - connecting video and audio cables (RCA plug) A14–A16
    - connecting video and audio cables (S-video connector) A16
    - modular computers A6–A7
    - tower computers A9–A10
    - power switch, on compact computers A2

- preferences
    - compressing movies A84
    - compressing recordings A40–A41
    - labeling FM Radio buttons A34
    - remote control A100
    - preset stations
      - assigning A29–A31
      - assigning automatically A32–A33
      - changing A35, A96
      - frequency color of buttons A37
      - labeling buttons A33–A34
      - pressing buttons A28
      - tuning in A24–A25
      - undoing changes A38
    - Preset Stations window (Options menu) A28, A32
  - printing Teletext pages A90
  - problems. *See*
    - troubleshooting
  - program schedule reminders A74–A76
- Q**
- questions, Teletext A90
  - QuickTime technology, playing back sound A39, A43
- R**
- radio. *See* FM radio
  - radio stations. *See* stations
  - RCA plugs, video connectors A14–A16
  - reading Teletext information A87
- reception, improving quality A65–A66
  - Record button (FM Radio window) A42
  - recordings, radio A39–A43
  - reminders, TV A74–A76
  - remote control
    - batteries A95, A107
    - CD-ROM player A99
    - changing channels A57
    - changing volume A58
    - disabling A100
    - FM radio A96–A97
    - opening Apple Video Player A46
    - problems with radio A103–A104
    - problems with TV or video A107
    - setting preferences A100
    - TV or video A98
  - removing TV channels from list A52–A53
  - renaming TV channels A64–A65
  - restricted access TV channels A57
  - Reveal buttons (Fastext) A88
  - riddles, Teletext A90
- S**
- Save Audio Recording dialog box A43
  - saving audio recordings A42–A43
  - saving screen images A80–A81
  - scheduling reminders for TV A74–A76
- screen
    - blank A108
    - changing dimensions A92
    - controls A61
    - dark or rolling picture A111
    - static A108
    - service and support A101
    - setting preferences. *See* preferences
  - Show Balloons (Guide [2] menu) A23, A54
  - Show Controls window A55–A56
  - Show Teletext Window command (Windows menu) A86
  - Shut Down command (Special menu) A2, A6
  - signal
    - problems with A105
    - range A36
    - strength A37, A104
  - Simple Text application, playing recordings A39, A43
  - size box, dragging A92
  - slider, problems seeing A110
  - software
    - setting options after reset A4
    - system A102
    - solutions to problems. *See* troubleshooting
  - sound
    - adjusting A25–A26, A58–A59
    - fading A53
    - muting A58
    - problems with A112
    - quality A41
- sound input ports, using RCA plugs A16, A19
  - speaker balance and tone A60
  - static
    - radio A22
    - TV or video A108, A112
  - stations
    - changing with remote control A96
    - presetting A28–A35
    - problems seeking A105
    - seeking A24–A25
    - stereophonic (stereo) sound not available A67
    - selecting A26
  - Stop button A42
  - storage, conserving disk space A40–A41, A83
  - support, technical A101
  - S-video input devices, choosing to watch A56
  - S-video ports A13, A19
  - system software A102, A106
- T**
- Table of Pages (TOP) accessing Teletext pages A89
  - changing Teletext pages A87
  - technical support A101
  - Teletext
    - accessing on current TV channel A86
    - changing pages A87
    - poor reception in window A87
    - preventing updates A87
    - printing pages A90
    - questions and riddles A90

- using Fastext with A88
- using Table of Pages (TOP) to access
  - pages A89
  - viewing window A86–A90
- television. *See* TV
- time, resetting A4
- TOP (Table of Pages)
  - accessing Teletext pages A89
  - changing Teletext pages A87
- tower computers, attaching
  - antennas A9–A11
- troubleshooting
  - listening to radio A102–A105
  - watching TV or video A106–A112
- tuner card. *See* TV/FM tuner card
- tuning in
  - preset stations A28
  - seeking stations A24–A25
- TV
  - attaching antenna to compact computers A2–A4
  - to modular computers A6–A8
  - to tower computers A9–A11
  - cable problems A109
  - installing application software A106–A107
  - problems hearing A109
  - problems with remote control A107
  - selecting as video source A22, A56
- TV channels
  - adding to or editing list A49–A51
  - changing A57, A98
  - fine tuning manually A65–A66
  - locking and unlocking A68–A69
  - naming A64–A65
  - password A70–A73
  - problems with list A110
  - remote control A98, A107
  - removing A52–A53
  - restricted access A57
  - setting for mono sound A67–A68
  - using Apple Video Player to tune A48–A49
- TV/FM Software Installation* CD A102, A106–A107
- TV/FM tuner card
  - attaching to compact computer A2–A4
  - attaching to modular computer A6–A8
  - attaching to tower computer A9–A11
  - connecting video equipment A12–A19
  - installing A1, A102–A103
- TV/MAC button
  - on remote control A46, A98
  - problems using A107
- TV port
  - compact computers A3
  - modular computers A7
  - tower computers A10
- TV program reminders A74–A76
- undoing changes A38
- VCR
  - connecting A12–A19
  - problems A111
  - video source A56
  - video
    - adjusting screen A61, A98
    - blank or static A108
    - capturing an image A80–A81
    - capturing sequences A82, A84
    - choosing source in Apple Video Player A55–A56
    - copying images A81
    - installing software application A106–A107
    - message to select TV A22
    - problems finding A106
    - problems with images A111
    - problems with remote control A107
    - video camera
      - connecting A12–A19
      - icon A80
    - video connectors
      - composite (RCA plug) A14–A16
      - determining which to use A13
      - S-video A17–A19
    - video equipment
      - connecting two pieces A12
- U
  - undoing changes A38
- V
  - connecting with RCA plugs A14–A17
  - connecting with S-video connectors and RCA plugs A17–A19
  - voltage output A111
  - video input cards
    - composite video connectors A14–A16
    - S-video connectors A17–A19
  - video input port, using RCA plugs A16
  - Video Input Standard setting A93
  - video out ports, using RCA plugs A16
  - video screen icon A55
  - video window
    - changing size using keyboard shortcuts A92
    - changing size using menu commands A91–A92
    - color of border A92
    - problems seeing slider A110
    - problems with channel list A110
  - switching to computer programs A98
  - volume
    - adjusting on computer A58
    - CD-ROM player A99
    - FM radio A25–A26, A96
    - TV A58–A59, A98, A109
    - volume slider, problems seeing A110

**W, X**  
warranty A101

**Y, Z**  
Y-adaptor audio cable,  
plugging in A15, A18

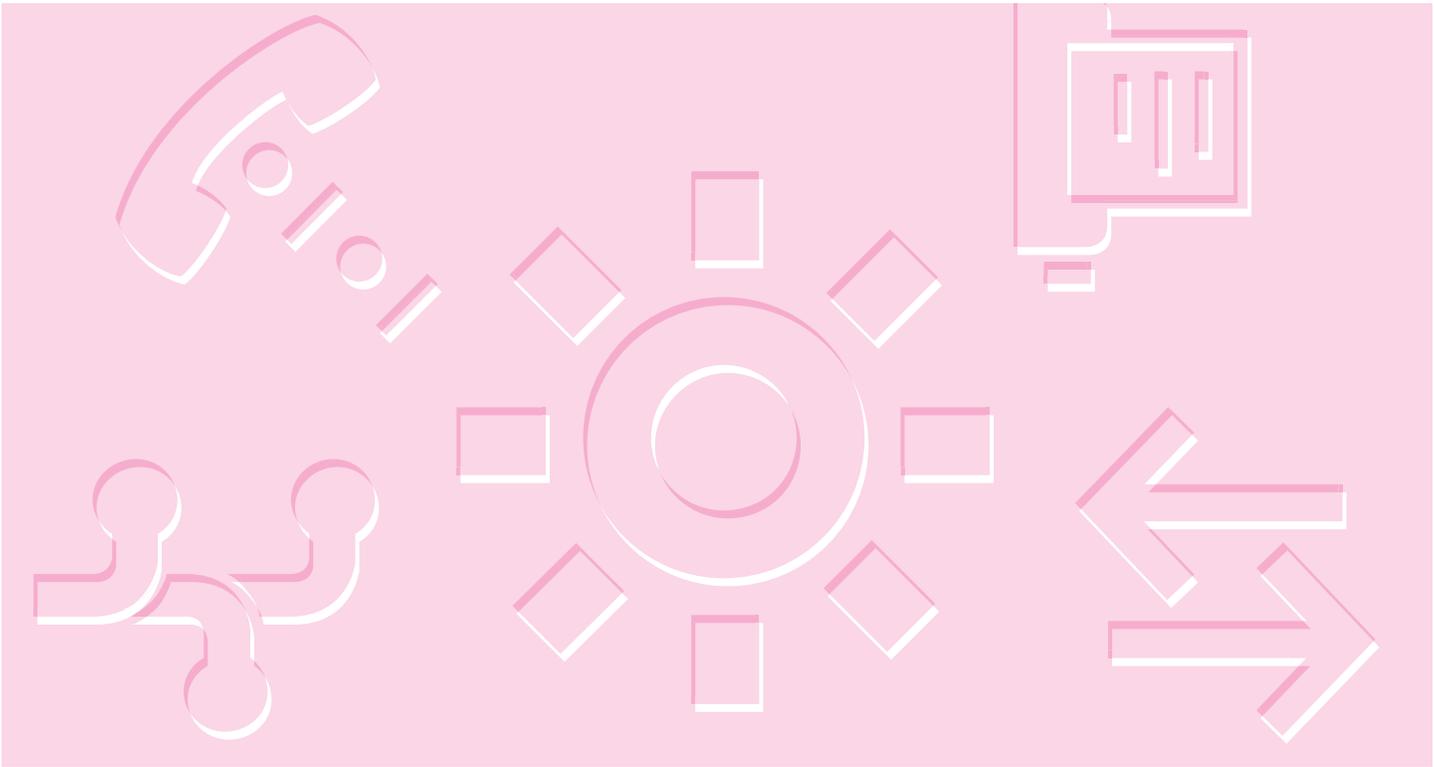





Apple TV/FM Radio System User's Manual

Apple TV/FM Radio System User's Manual

Apple TV/FM Radio System User's Manual

# Apple TV/FM Radio System

.....  
*User's Manual*



© 1997 Apple Computer, Inc. All rights reserved.

Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Apple. Your rights to the software are governed by the accompanying software license agreement.

The Apple logo is a trademark of Apple Computer, Inc., registered in the U.S. and other countries. Use of the "keyboard" Apple logo (Option-Shift-K) for commercial purposes without the prior written consent of Apple may constitute trademark infringement and unfair competition in violation of federal and state laws.

Every effort has been made to ensure that the information in this manual is accurate. Apple is not responsible for printing or clerical errors.

Apple Computer, Inc.  
1 Infinite Loop  
Cupertino, CA 95014-2084  
408-996-1010  
<http://www.apple.com>

Apple, the Apple logo, LaserWriter, Macintosh, and QuickTime are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.

Adobe and PostScript are trademarks of Adobe Systems Incorporated or its subsidiaries and may be registered in certain jurisdictions.

Helvetica is a registered trademark of Linotype-Hell AG and/or its subsidiaries. Simultaneously published in the United States and Canada.

Mention of third-party products is for informational purposes only and constitutes neither an endorsement nor a recommendation. Apple assumes no responsibility with regard to the performance or use of these products.

### The Apple Publishing System

This Apple manual was written, edited, and produced on a desktop publishing system using Apple Macintosh computers and QuarkXPress. Technical illustrations were drawn in Adobe™ Illustrator; screen shots were created and modified with system software, ExposurePro, and Adobe Photoshop. Final pages were output using PostScript™ technology.

Text type is Apple Garamond, Apple's corporate font. Display type is Helvetica® Black. Ornaments are custom symbols designed for Apple Computer.

PostScript, the LaserWriter page-description language, was developed by Adobe Systems Incorporated.

# I N T H I S B O O K

**Apple TV/FM Radio System User's Manual A**

**Apple TV/FM Radio System User's Manual B**

**Apple TV/FM Radio System User's Manual C**

## Communications regulation information

### FCC statement

This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in Part 15 of FCC rules. See instructions if interference to radio or television reception is suspected.

### Radio and television interference

The equipment described in this manual generates, uses, and can radiate radio-frequency energy. If it is not installed and used properly—that is, in strict accordance with Apple's instructions—it may cause interference with radio and television reception.

This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in Part 15 of FCC rules. These specifications are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

You can determine whether your computer system is causing interference by turning it off. If the interference stops, it was probably caused by the computer or one of the peripheral devices.

If your computer system does cause interference to radio or television reception, try to correct the interference by using one or more of the following measures:

- Turn the television or radio antenna until the interference stops.
- Move the computer to one side or the other of the television or radio.
- Move the computer farther away from the television or radio.
- Plug the computer into an outlet that is on a different circuit from the television or radio. (That is, make certain the computer and the television or radio are on circuits controlled by different circuit breakers or fuses.)

If necessary, consult an Apple-authorized service provider or Apple. See the service and support information that came with your Apple product. Or, consult an experienced radio/television technician for additional suggestions.


**Important** Changes or modifications to this product not authorized by Apple Computer, Inc., could void the FCC Certification and negate your authority to operate the product.

This product was tested for FCC compliance under conditions that included the use of Apple peripheral devices and Apple shielded cables and connectors between system components. It is important that you use Apple peripheral devices and shielded cables and connectors between system components to reduce the possibility of causing interference to radios, television sets, and other electronic devices. You can obtain Apple peripheral devices and the proper shielded cables and connectors through an Apple-authorized dealer. For non-Apple peripheral devices, contact the manufacturer or dealer for assistance.

### Industry Canada statement

This Class B device meets all requirements of the Canadian interference-causing equipment regulations.

Cet appareil numérique de la Class B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

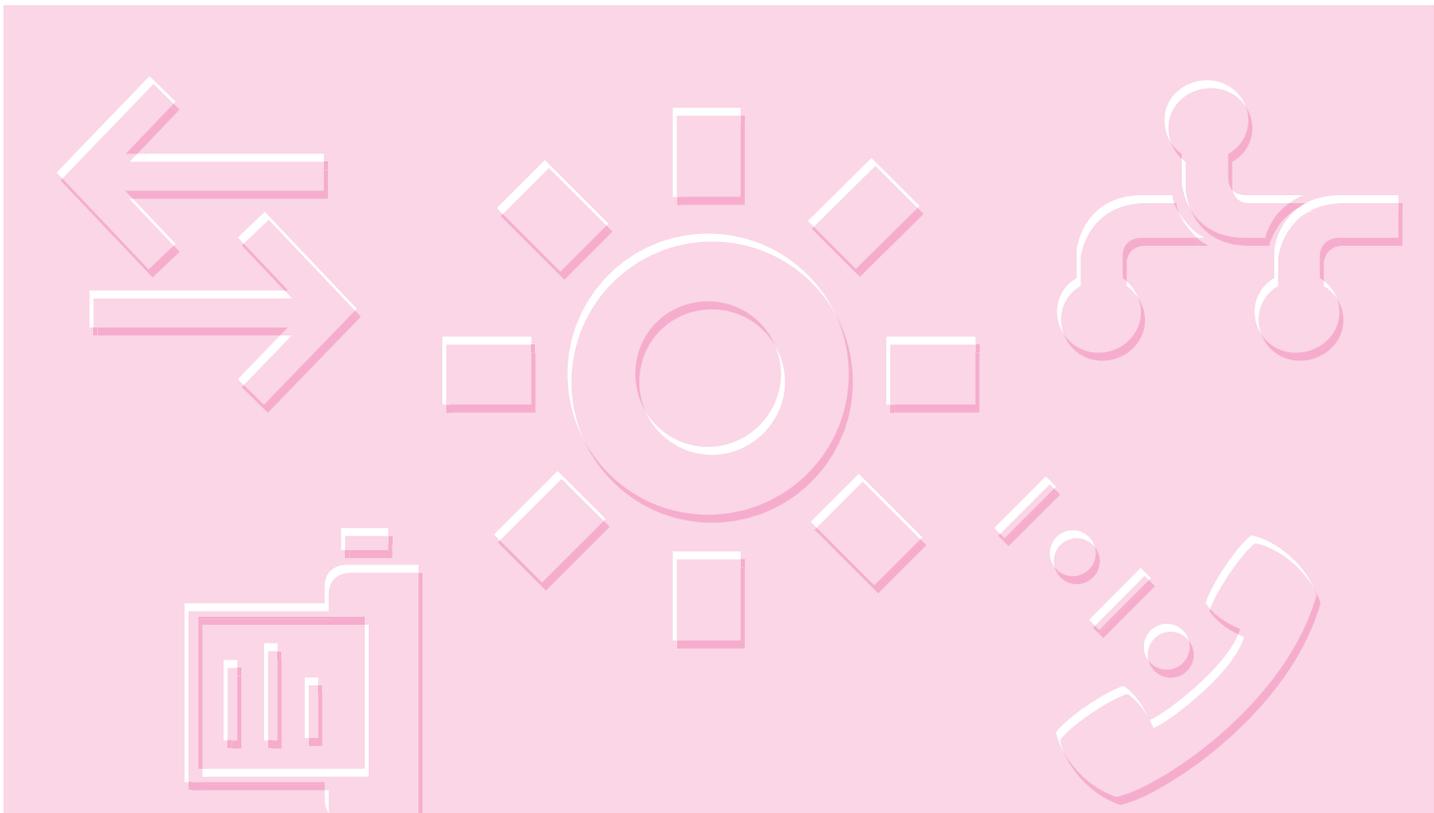



## C O N T E N T S

### **Preface** Aiii

#### **1 Connecting Antennas, Cable, and Other Video Equipment** A1

Before you start A1

If you have a compact computer A2

If you have a modular computer A6

If you have a tower computer A9

Connecting other video equipment A12

Where to go from here A20

#### **2 Listening to the FM Radio** A21

Turning on the FM radio A22

Turning off the FM radio A23

Getting help A23

Tuning in to stations A24

Adjusting the sound A25

#### **3 Customizing the FM Radio Settings** A27

Presetting stations A28

Setting signal range and strength A36

Setting other preferences A37

#### **4 Recording from the Radio** A39

Compressing recordings A40

Saving recordings A42

#### **5 Watching TV or Video** A45

Opening Apple Video Player A46

Setting up your TV channels A48

Getting help A53

- Using a hot key A55
- Choosing a video source A55
- Changing TV channels A57
- Adjusting the sound A58
- Adjusting the picture A61

## **6 Customizing the TV Tuner Settings A63**

- Giving names to channels A64
- Fine tuning your channels A65
- Setting channels to monophonic sound A67
- Locking and unlocking channels A68
- Creating and changing a password A70
- Setting and editing TV reminders A74
- Setting a hot key A77

## **7 Capturing TV or Video Images A79**

- Capturing individual images A80
- Capturing movies A82

## **8 Other Features A85**

- Viewing the Teletext window A86
- Changing the video window size A91
- Changing the window color A92
- Setting the video input standard A93

## **9 Using the Remote Control A95**

- Controlling your FM radio A96
- Controlling TV or video A98
- Controlling your CD-ROM player A99
- Setting preferences A100

## **10 Troubleshooting A101**

- Problems listening to the radio A102
- Problems watching TV or video A106

## **Index A113**

## P R E F A C E

---

This manual tells you how to connect an FM antenna and TV antenna (or cable service connection) to your card and how to use the Apple FM Radio and Apple Video Player software. It also explains how to connect other video equipment such as a VCR.

**Important** If you purchased the computer with the TV/FM tuner card already installed, you are ready to read the information in this manual. If you purchased the *Apple TV/FM Radio System* kit separately from your computer, before you read this manual be sure to install the card following the instructions in the *Apple TV/FM Radio System Installation Manual* (in the other manual in your kit).

The TV/FM tuner card and software enable you to

- watch TV and video and listen to the radio on your computer
- view Teletext information
- capture video or TV images on disk
- save radio recordings on disk
- determine which channels or radio stations you receive
- set up a password to restrict access to one or more TV channels
- manipulate basic TV and radio features with the included remote control
- quickly switch among watching TV, listening to the radio, and using your other computer application programs